

# **AG3000 Terminal Navigation**

Basic Mode Operation



# AG3000 Basic Mode Index

*Select an Option*

## AG3000 Calibration Procedure

1.) How To Establish an “A+B” Line

2.) How To Establish a “Contour” Line

3.) How To Establish an “A+ Heading” Line

 
 
 
4.) How To Establish a “Pivot” Line

Crosstrack

Accuracy

39.3 in

In Advanced Mode, select the "Wrench" icon in order to calibrate the system

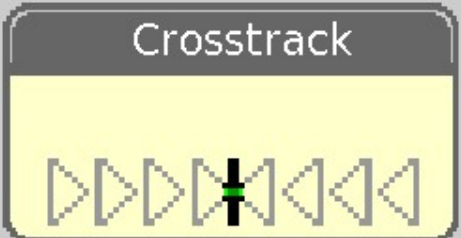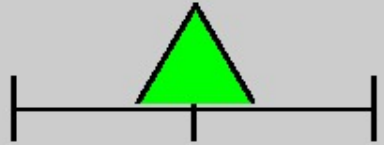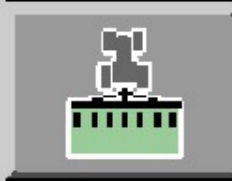

Esc

### Wayline



Scroll to the next page

GO Wayline

Wayline Type:

Pivot



### Implement



Implement:

GO Implement

Width:

394 in

Overlap:

0 in



### System Status



### Correction Setup



WAAS



Esc



Steering Res



Scroll to the next page



GPS Drift Compensation



Basic / Advanced



User Mode: Advanced



Vehicle



Profile:

combine



Esc



Calibration



Select the "Calibration" icon



System



Esc



Compass Cal



W

Select the "Compass Calibration" icon

0

WAS Calibration



Weeks since calibration: >>>>>

0



AUTO



Esc

Select the green check

Compass  
already exists. To  
continue with calibration  
press tick.



A vertical sidebar on the left side of the screen contains four icons: a top icon with a camera and 'AGCO' logo, a silhouette of a tractor, a folder with a red 'X' over it, and a steering wheel icon on a red background.



STEP 1 / 4

Esc



**Follow instructions and select green check**

Compass  
be comp  
ground away from high  
voltage and large metal  
objects. Press tick to  
begin calibration.



A vertical sidebar on the left side of the screen contains four icons: a top icon with a camera and 'AGCO' logo, a silhouette of a tractor, a folder with a red 'X' over it, and a steering wheel icon on a red background.



STEP 1 / 4

Esc



**Follow instructions and select green check**

Drive in a direction completing one and a half continuous circles press tick.



STEP 2 / 4

Esc



**Follow instructions and select green check**

Calibration complete  
a straight line.

check



STEP 3 / 4

Esc

Select the green check

Calibration complete. Press tick to exit.



A vertical sidebar on the left side of the screen contains four icons: a top icon with a logo, a tractor icon, a folder icon with a red 'X', and a steering wheel icon on a red background.



STEP 4 / 4

Esc

Compass Cal



W

**Compass calibration is complete.  
Select the "WAS Calibration" icon to  
calibrate the wheel angle sensor**

0



WAS Calibration



Weeks since calibration: >>>>>

0



Esc

Turn wh  
left and

**Follow the instructions and select the green check**

Влево проверк

STEP > /1: 4



Esc

Turn wh  
right an

Follow the instructions and select the green check

Взглян check

STEP > /2: 4



Esc

Center  
tick.

**Follow the instructions and select the green check**

Влеву стрелку

STEP > /3: 4



Esc



Calibrat  
Press ti

Select the green check

Select the green check

STEP > /4: 4



Esc



S

**Cycle the power on the Auto Guidance System**

1055 - Steering controller needs to be reset. Please power down steering controller or vehicle.



Esc

Compass Cal



**Calibration is complete. Select the "ESC" icon to return to the menu**

0

WAS Calibration



Weeks since calibration: >>>>>

0



Esc

Steering Res



Select the highlighted icon to switch to "Basic Mode"



GPS Drift Compensation



Basic / Advanced



User Mode: Advanced



Vehicle



Profile:

combine



Esc

Steering Res

Select the green check



Confirm change of user mode to Basic?

Select the green check



GPS D



Basic



Vehicle



Press ESC to cancel.

combine



Esc



Calibration Complete

**Return to Index**



 
 
 
Esc



A+B Line



In Basic Mode, select the "GO" icon

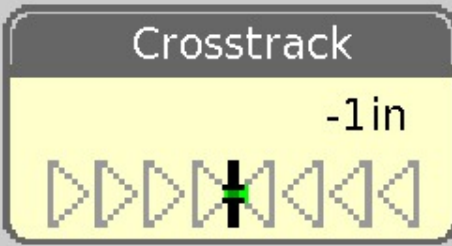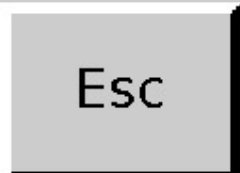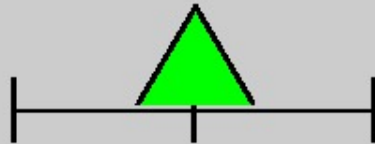





Current

Select the highlighted box to input desired overlap

 
 
Offset 0 in



Overlap


Link Length

39 in

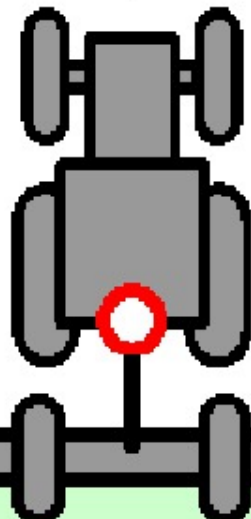

Width

 
394 in

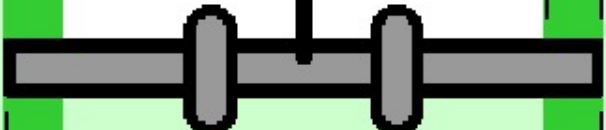

Press ESC to cancel.



 Esc

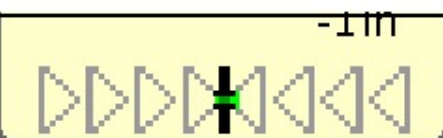



**Input desired overlap then select the green check on the calculator**

Current

(0)

0

-3937 - 390

Link Length

39 in

 


7	8	9	C
4	5	6	CLR
1	2	3	+/-
0	.		



Press ESC to cancel.


Esc

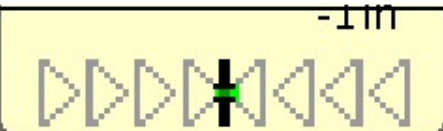




Select the green check

 Current

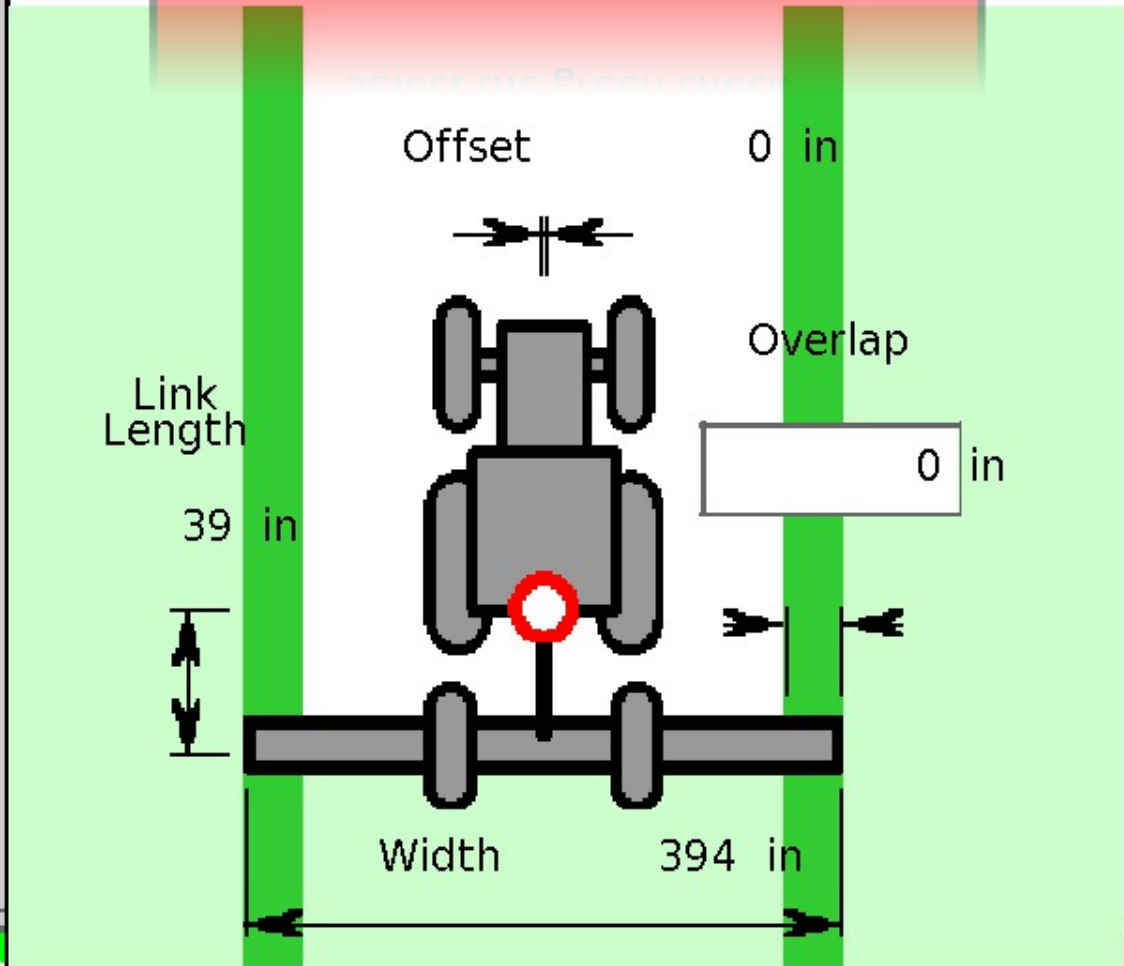

Press ESC to cancel.

 Esc

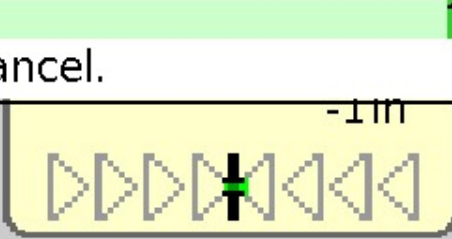



To establish an "A+B" line, select the highlighted icon



A + B



Contour



A+  
Heading



Pivot



Press ESC to cancel.

Esc





Select the highlighted icon to establish your initial "A" point



 
Your initial "A" point

Wayline Start:




Press ESC to cancel.

Esc

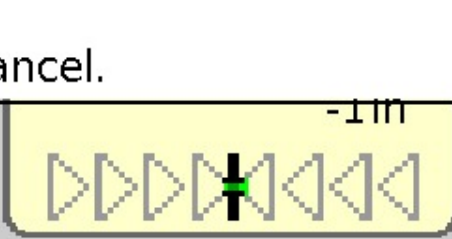



Travel a minimum distance of 33 ft

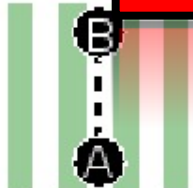 

Wayline Finish:



Current Distance

0 ft

 
Minimum Distance

33 ft



Press ESC to cancel.

Esc

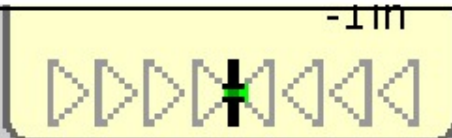



Select the highlighted icon to establish your final "B" point



Wayline Finish: "B" point

Wayline Finish:



Current Distance

36 ft

 
Minimum Distance

33 ft



Press ESC to cancel.





Esc

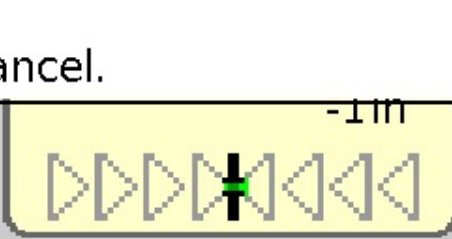





    
The system can also be engaged remotely with the "AutoGuide" switch located on the right hand console

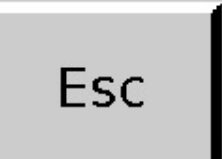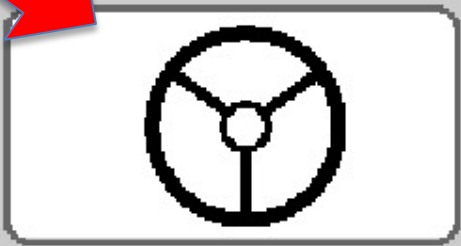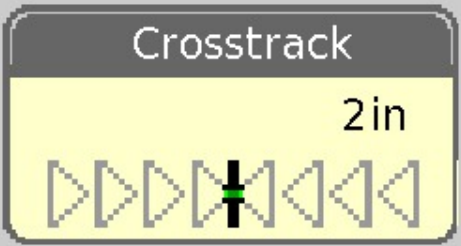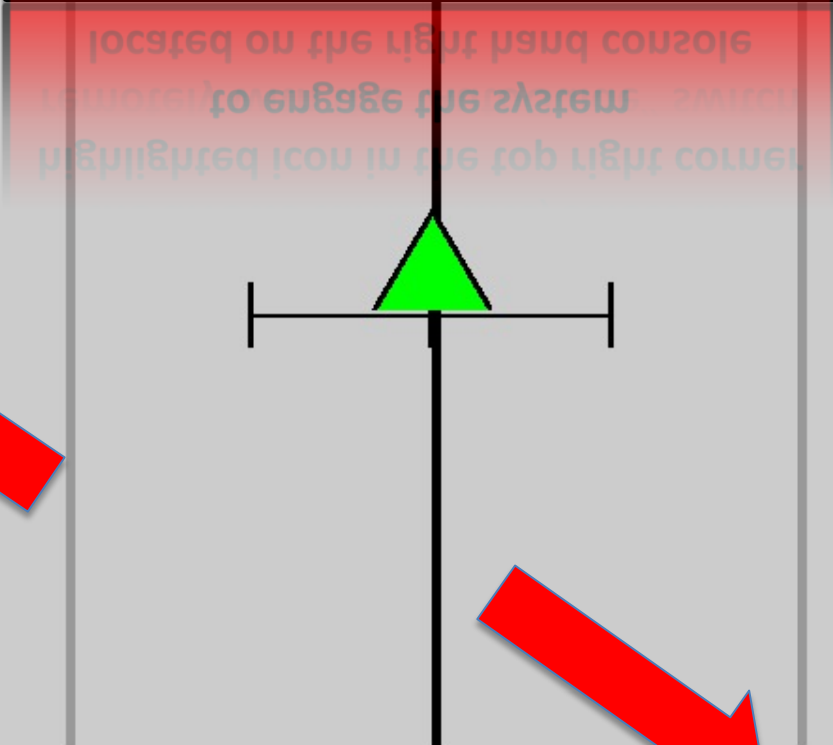






 The "AutoGuide" icon will turn green to signal the system is engaged

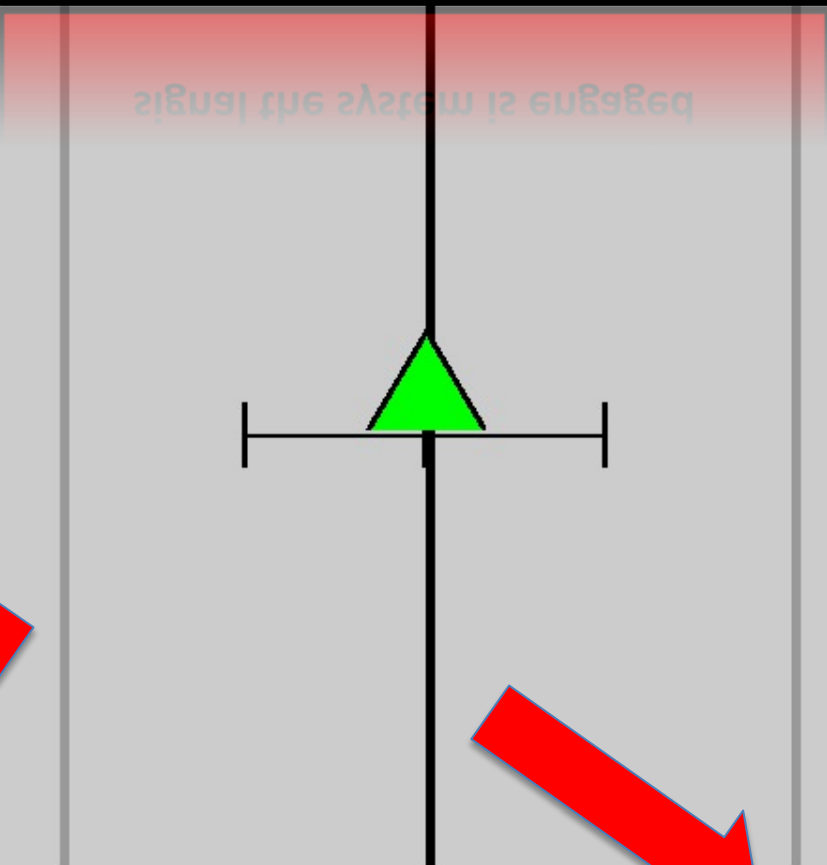

Esc

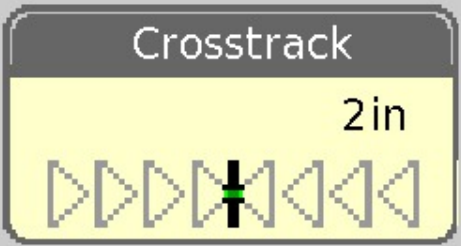 



**Return to Index**

 **AGCO**  
Your Agriculture Company



Esc

Untitled  
INSTALL\_PATH=  
6234: old prio  
Screenshot sav  
/opt/agco #

 
# Contour Line



In Basic Mode, select the "GO" icon



Esc

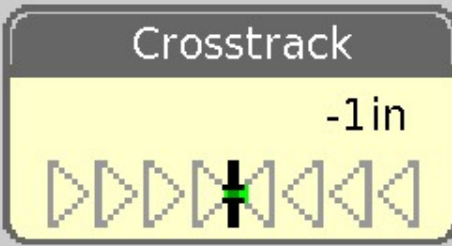



Select the highlighted box to input desired overlap

Current

 
 
Offset 0 in



Overlap


Link Length

39 in

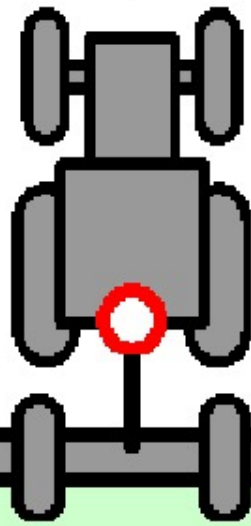


Width

 394 in



Press ESC to cancel.

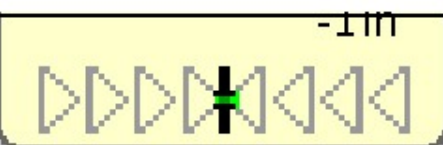 

Esc



**Input desired overlap then select the green check on the calculator**

Current

(0)



0

-3937 - 390

Link Length

39 in

 


7	8	9	C
4	5	6	CLR
1	2	3	+/-
0	.		



Press ESC to cancel.


Esc

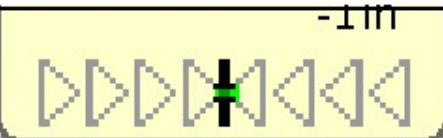




Select the green check

 Current

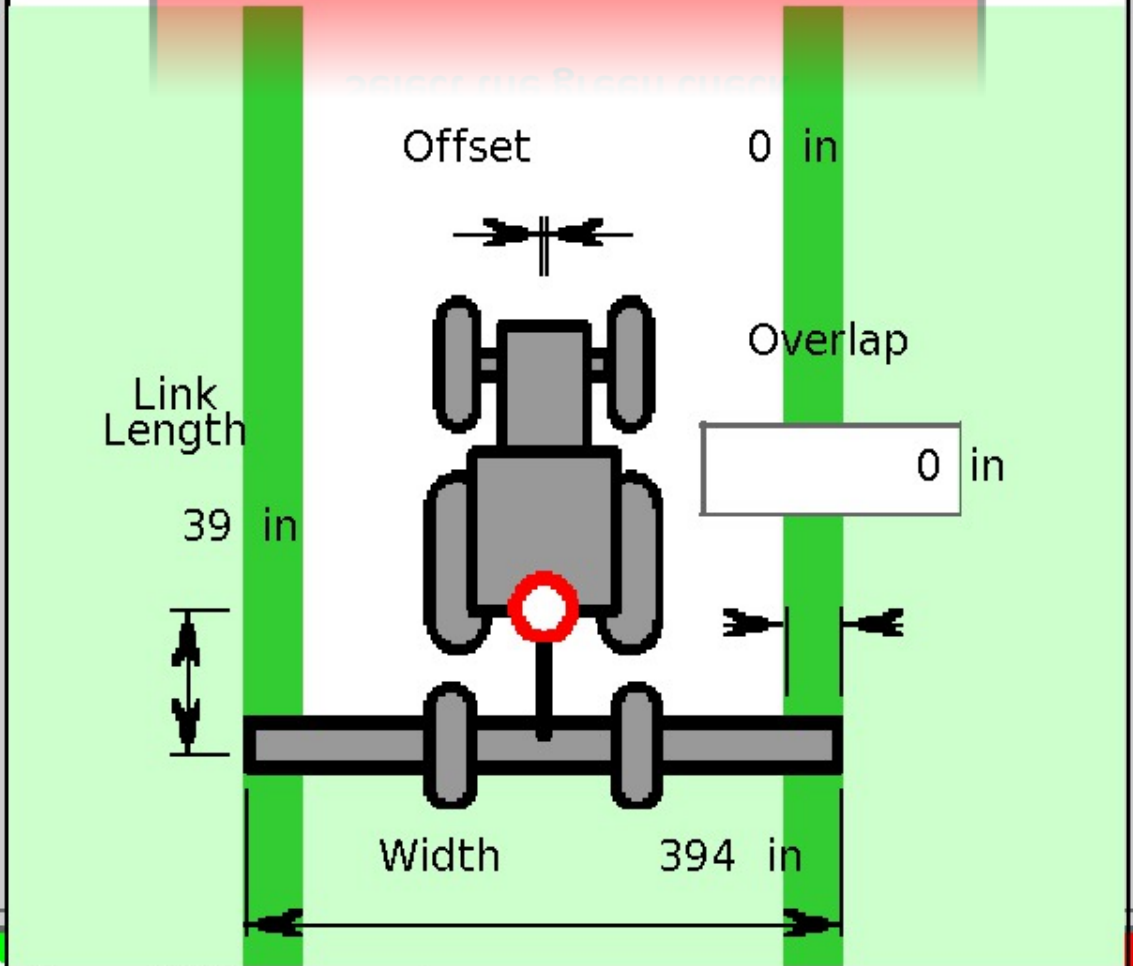

Esc

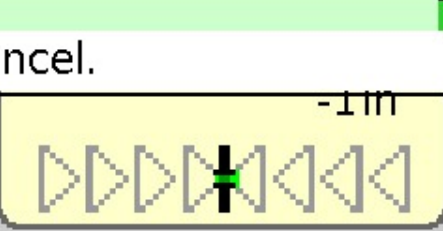 



To establish a "Contour" line, select the highlighted icon

Select



A + B



Contour



A+ Heading

 


Pivot



Press ESC to cancel.

Esc

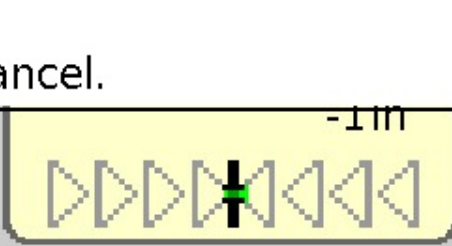






To establish a "Contour" line, select the highlighted icon

Wayline Start:



Press ESC to cancel.

 Esc

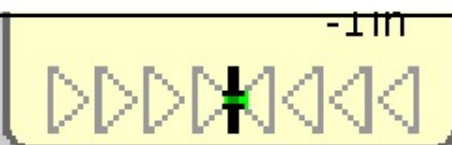

Travel along field contour with machine

Wayline Finish:



Current Points

1

Minimum Points  
Required

5



Press ESC to cancel.

Esc





To finalize contour line, select the highlighted icon



μικροεικονίδιο

Wayline Finish:



Current Points

6

Maximum Number of Points

 
2980



Press ESC to cancel.







Esc

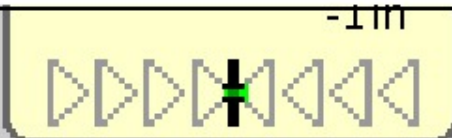




    The system can also be engaged remotely with the "AutoGuide" switch located on the right hand console

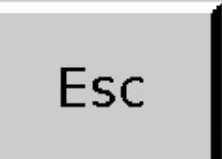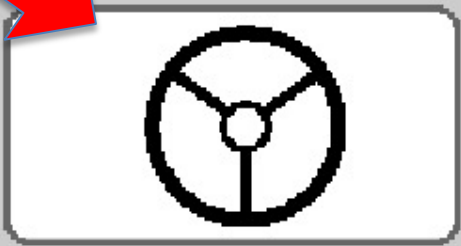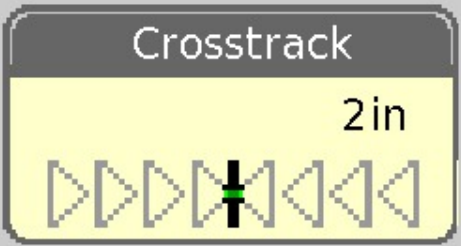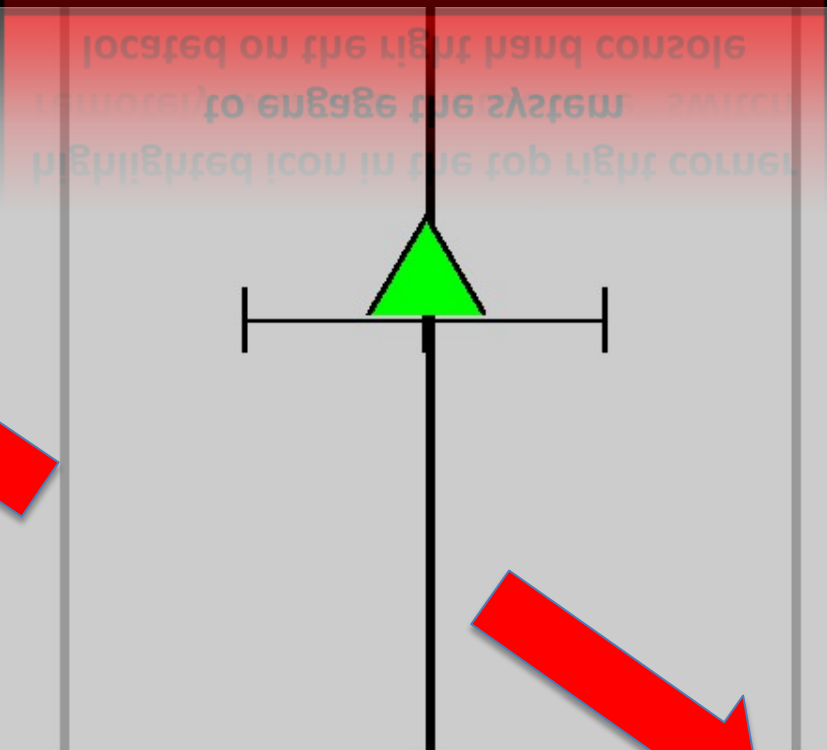




 The "AutoGuide" icon will turn green to signal the system is engaged

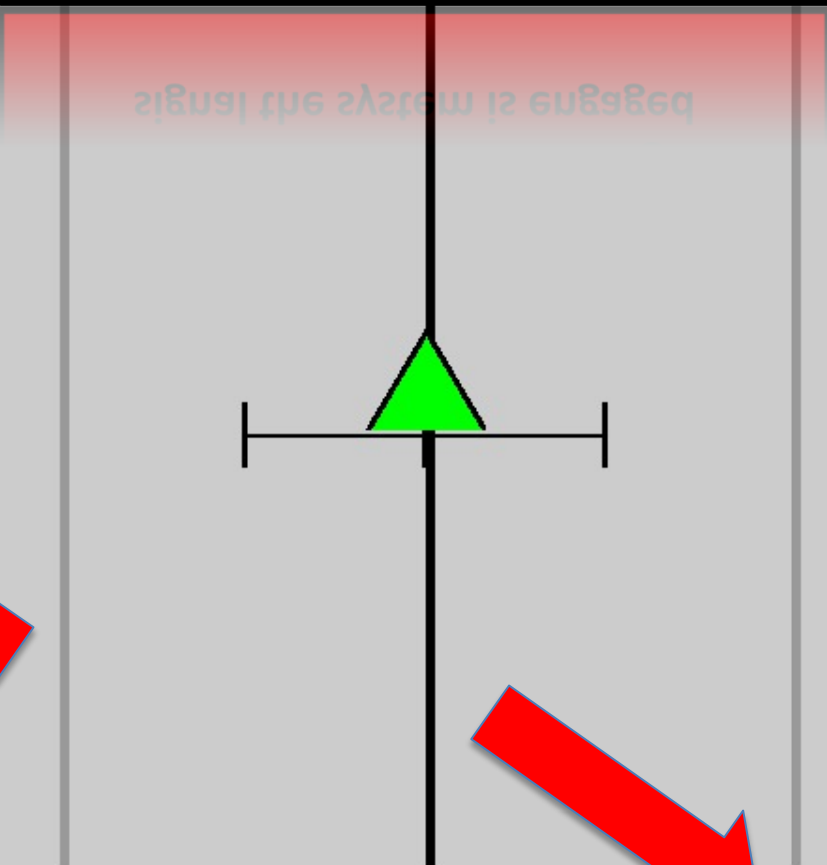

Esc

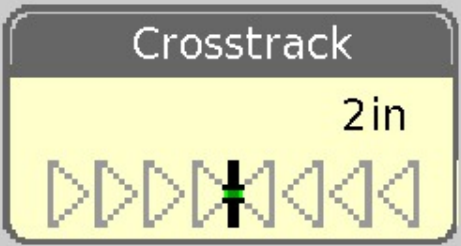 




**Return to Index**



 Esc

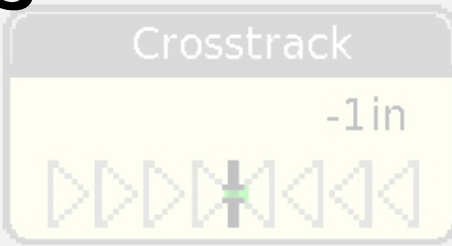


Untitled  
INSTALL\_PATH=  
6234: old prio  
Screenshot sav  
/opt/agco #


# A+ Heading



 In Basic Mode, select the "GO" icon

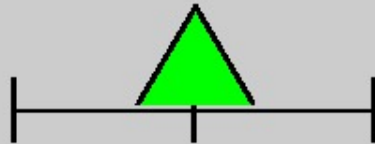

Esc

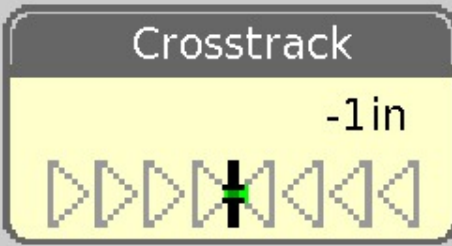 





Select the highlighted box to input desired overlap

Current

Offset 0 in

Overlap

0 in

Link Length

 
39 in

Width

394 in

Press ESC to cancel.

Esc

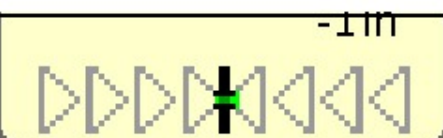



**Input desired overlap then select the green check on the calculator**

Current

(0)



0

-3937 - 390

Link Length

39 in

 


7	8	9	C
4	5	6	CLR
1	2	3	+/-
0	.		



Press ESC to cancel.


Esc

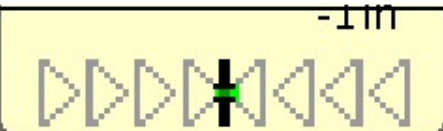




Select the green check

 Current

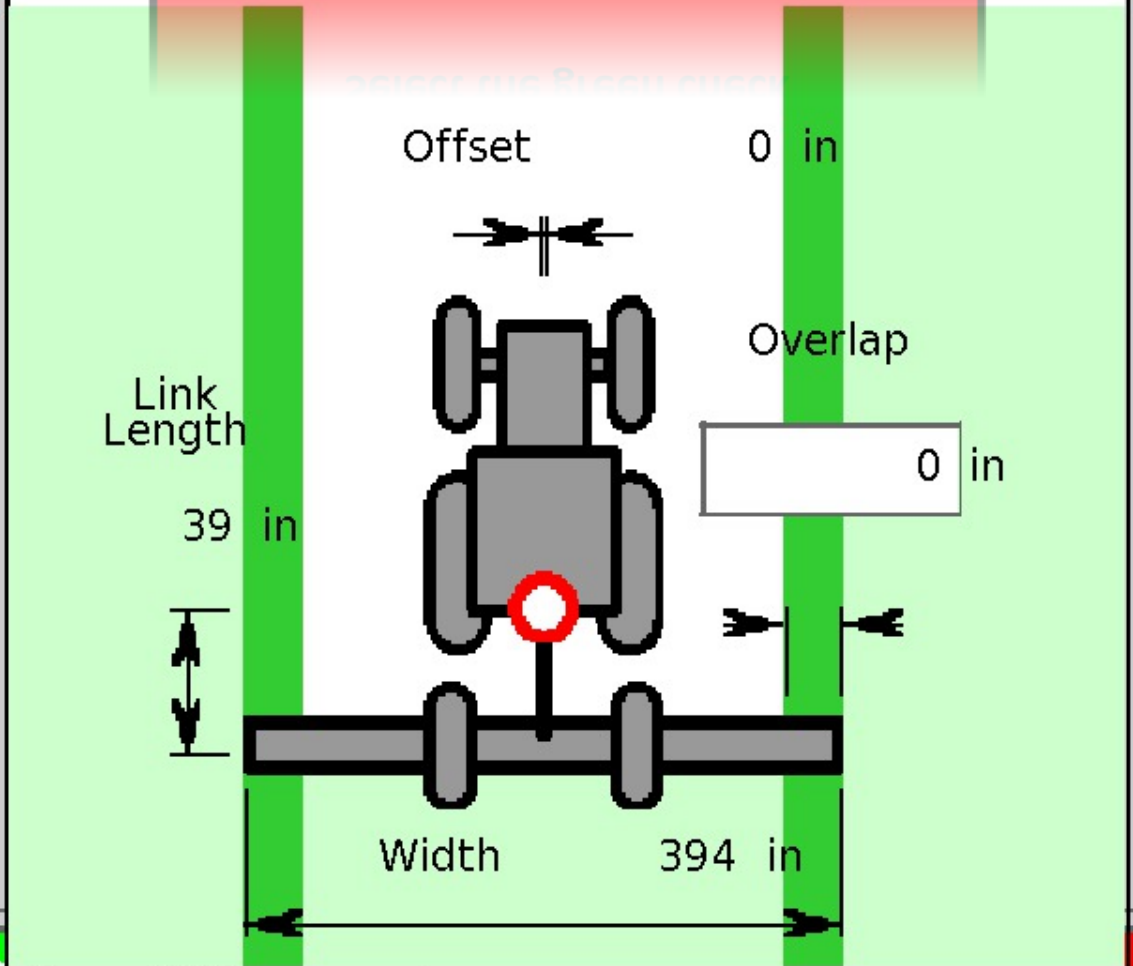

Press ESC to cancel.

 Esc

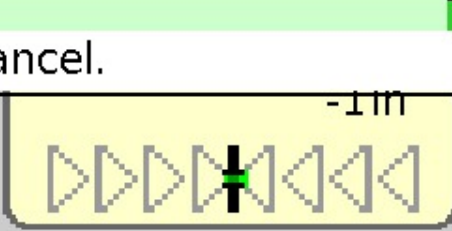

To establish an "A+ Heading", select the highlighted icon



A + B



Contour



A+ Heading

 


Pivot

Press ESC to cancel.



Esc

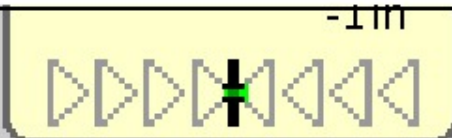



Select the highlighted box to input desired heading



desired heading

 
 
Heading:

89.712

°



Press ESC to cancel.

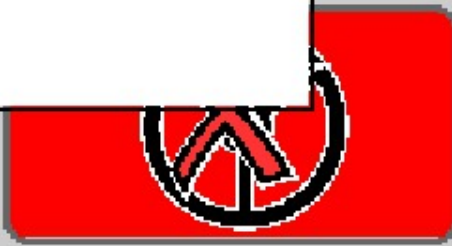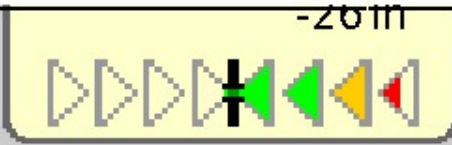

Esc



**Input desired heading then select the green check**



Heading:

0.000 - 360.000

7	8	9	C
4	5	6	CLR
1	2	3	+/-
0	.		



Press ESC to cancel.

Esc





Select the highlighted icon to finalize the "A+ Heading" line



 
the "A+ Heading" line

Wayline Start:



Press ESC to cancel.

Esc




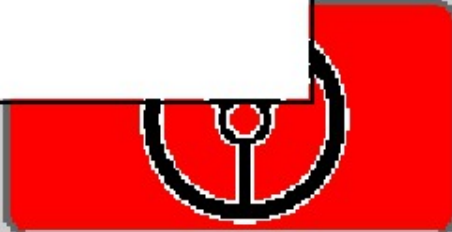


-26 m





    The system can also be engaged remotely with the "AutoGuide" switch located on the right hand console

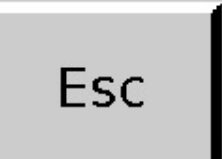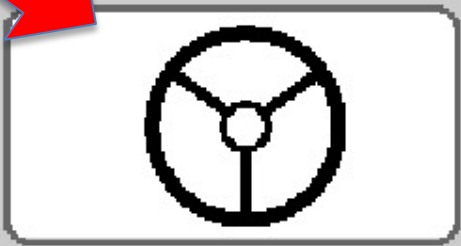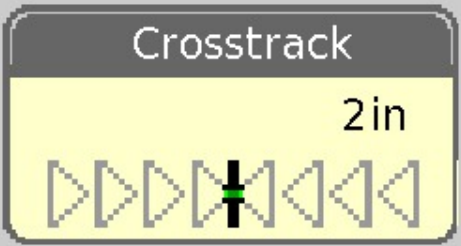
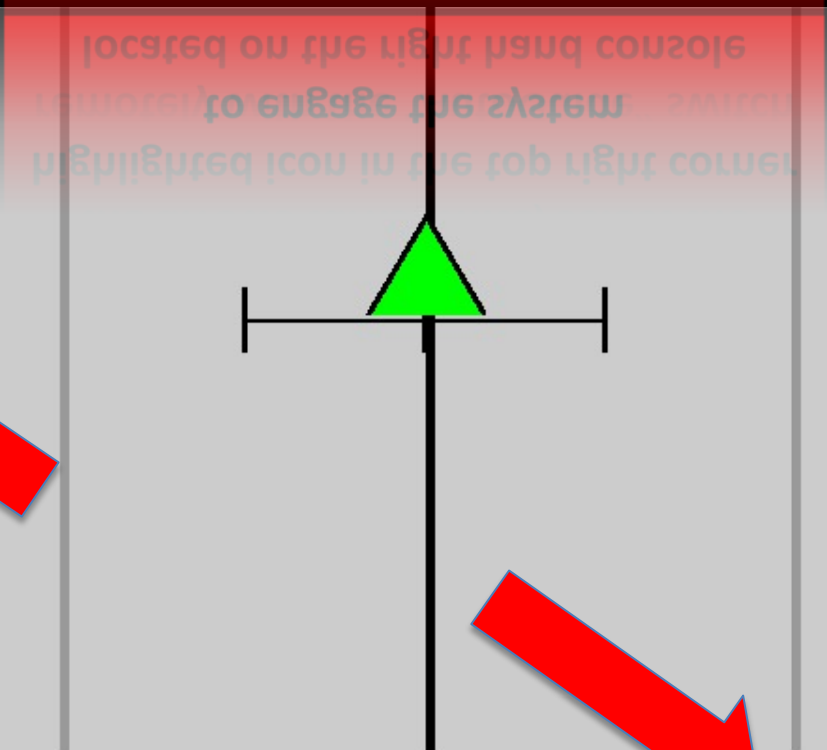






The "AutoGuide" icon will turn green to signal the system is engaged

  mirrored text: The "AutoGuide" icon will turn green to signal the system is engaged

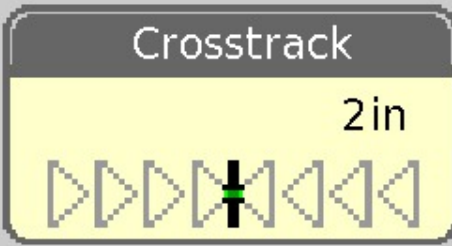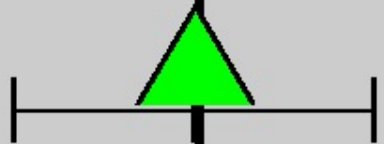



Return to Index





Esc

Untitled  
INSTALL\_PATH=  
6234: old prio  
Screenshot sav  
/opt/agco #

# Pivot



  In Basic Mode, select the "GO" icon

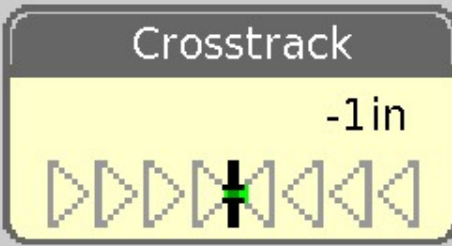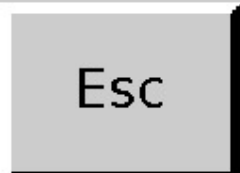



Select the highlighted box to input desired overlap

Current

 
 
Offset 0 in



Overlap


Link Length

39 in

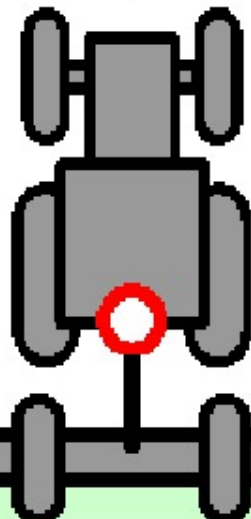

Width

 
394 in



Press ESC to cancel.



 Esc

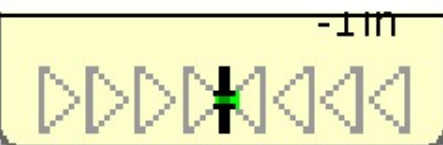



**Input desired overlap then select the green check on the calculator**

Current

(0)

0

-3937 - 390

Link Length

39 in

 


7	8	9	C
4	5	6	CLR
1	2	3	+/-
0	.		



Press ESC to cancel.


Esc

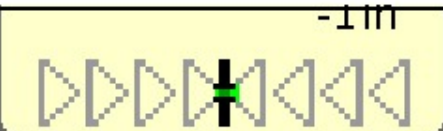




Select the green check

 Current

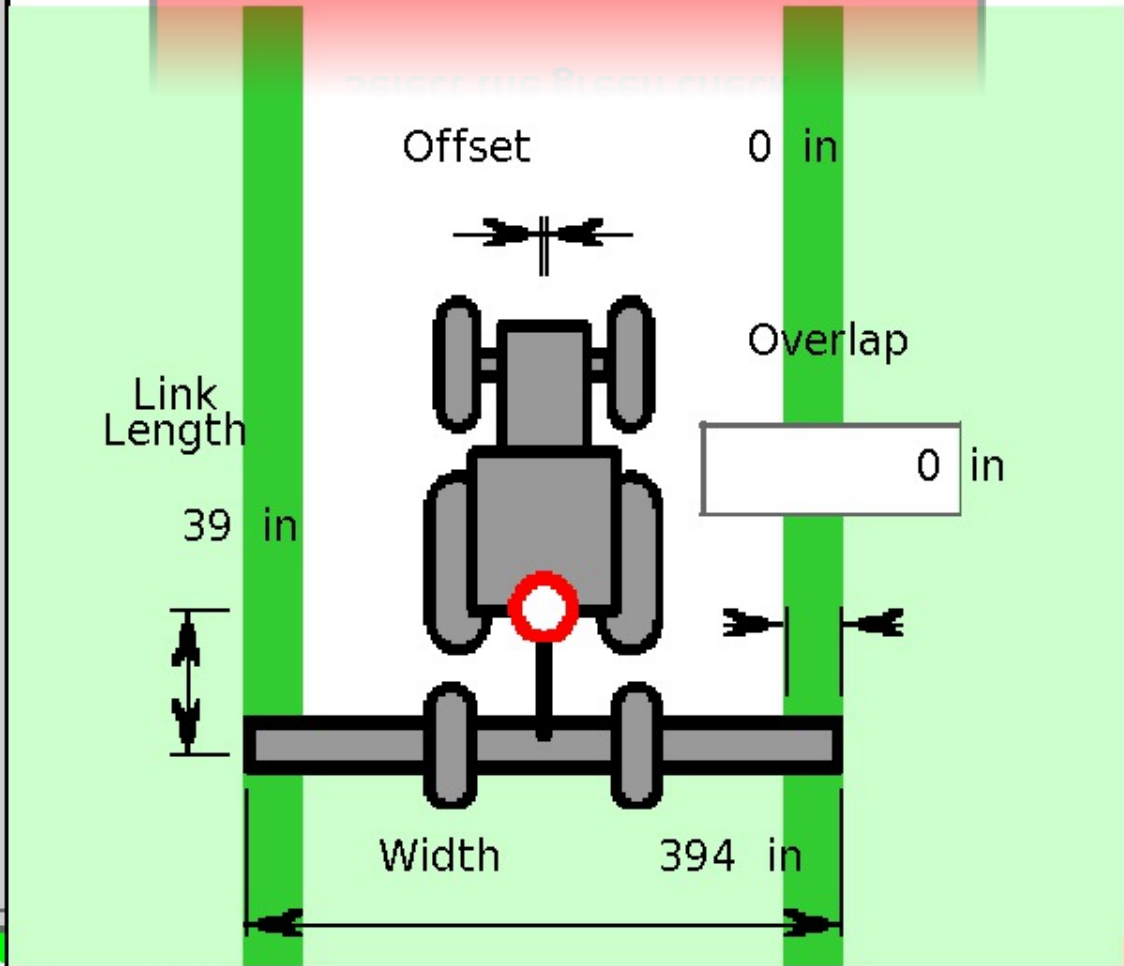

Press ESC to cancel.

 Esc

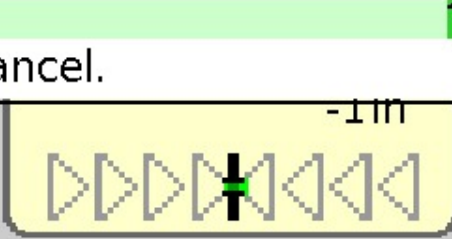

Select the highlighted icon to establish a "Pivot" line



A + B



Contour



A +  
Heading



Pivot

Press ESC to cancel.

Esc







To define your initial point, select the highlighted icon



 
μικροσκοπείο icon

Wayline Start:



Press ESC to cancel.

Esc

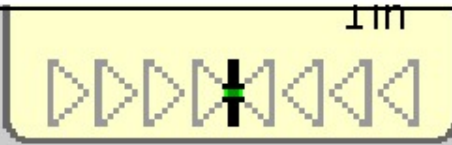



Follow the pivot circle with the machine until minimum center point accuracy is achieved

Wayline Finish:



Current Point Accuracy

1in

 
 
Minimum Center Point Accuracy

39in



Press ESC to cancel.

Esc

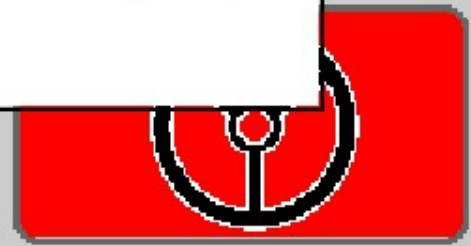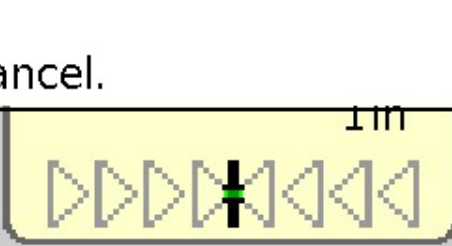



Select the highlighted icon to finalize "Pivot" line



Wayline Finish:



Current Point Accuracy

 
 
1in

Minimum Center Point Accuracy

39in







Press ESC to cancel.

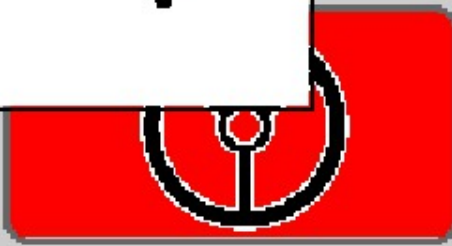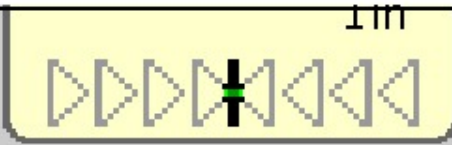

Esc




    The system can also be engaged remotely with the "AutoGuide" switch located on the right hand console

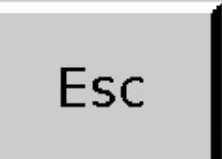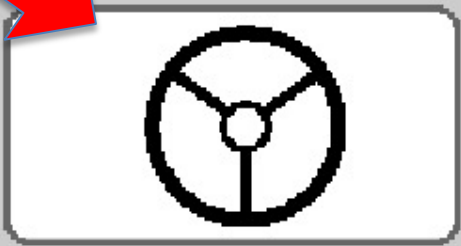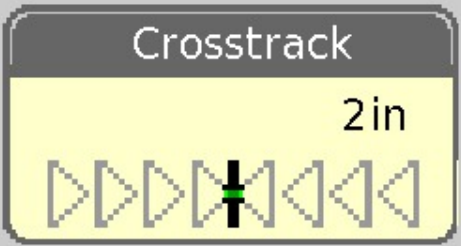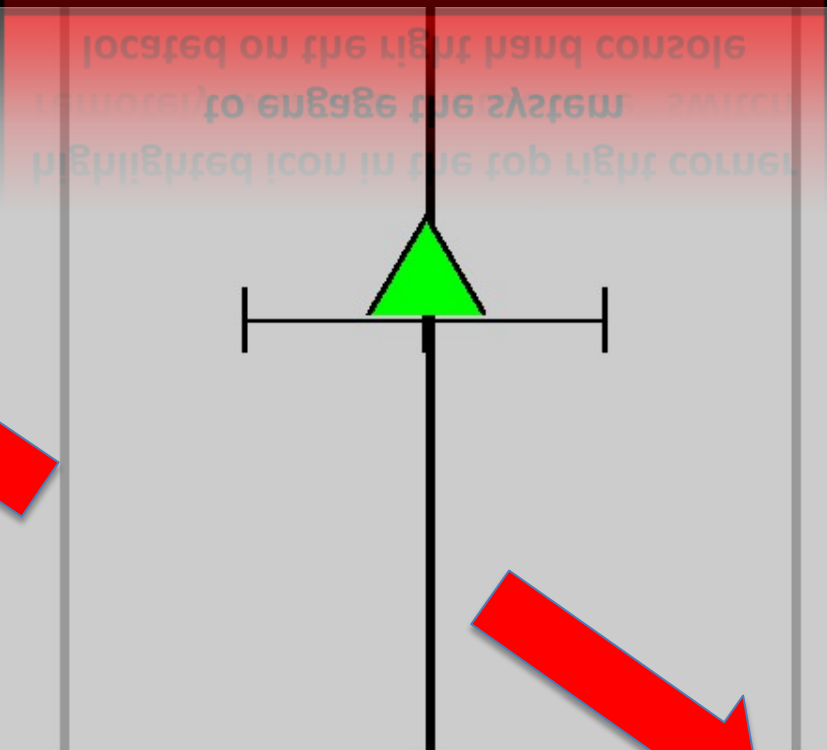




 The "AutoGuide" icon will turn green to signal the system is engaged

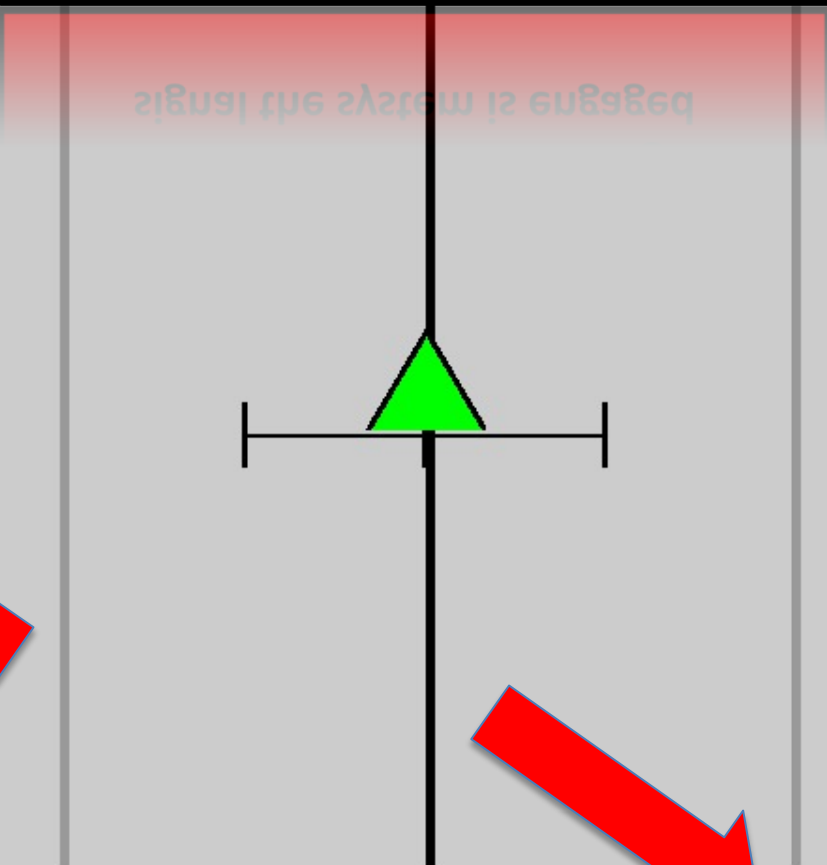

Esc

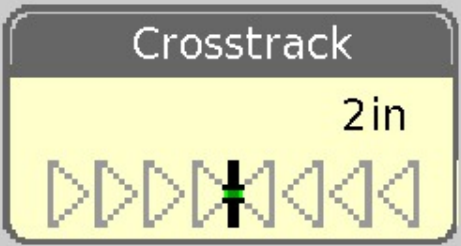 



Return to Index



Esc

Untitled  
INSTALL\_PATH=  
6234: old prio  
Screenshot sav  
/opt/agco #