



Auto Guide






- Press the Auto Guide button to turn on the system. A red light will illuminate

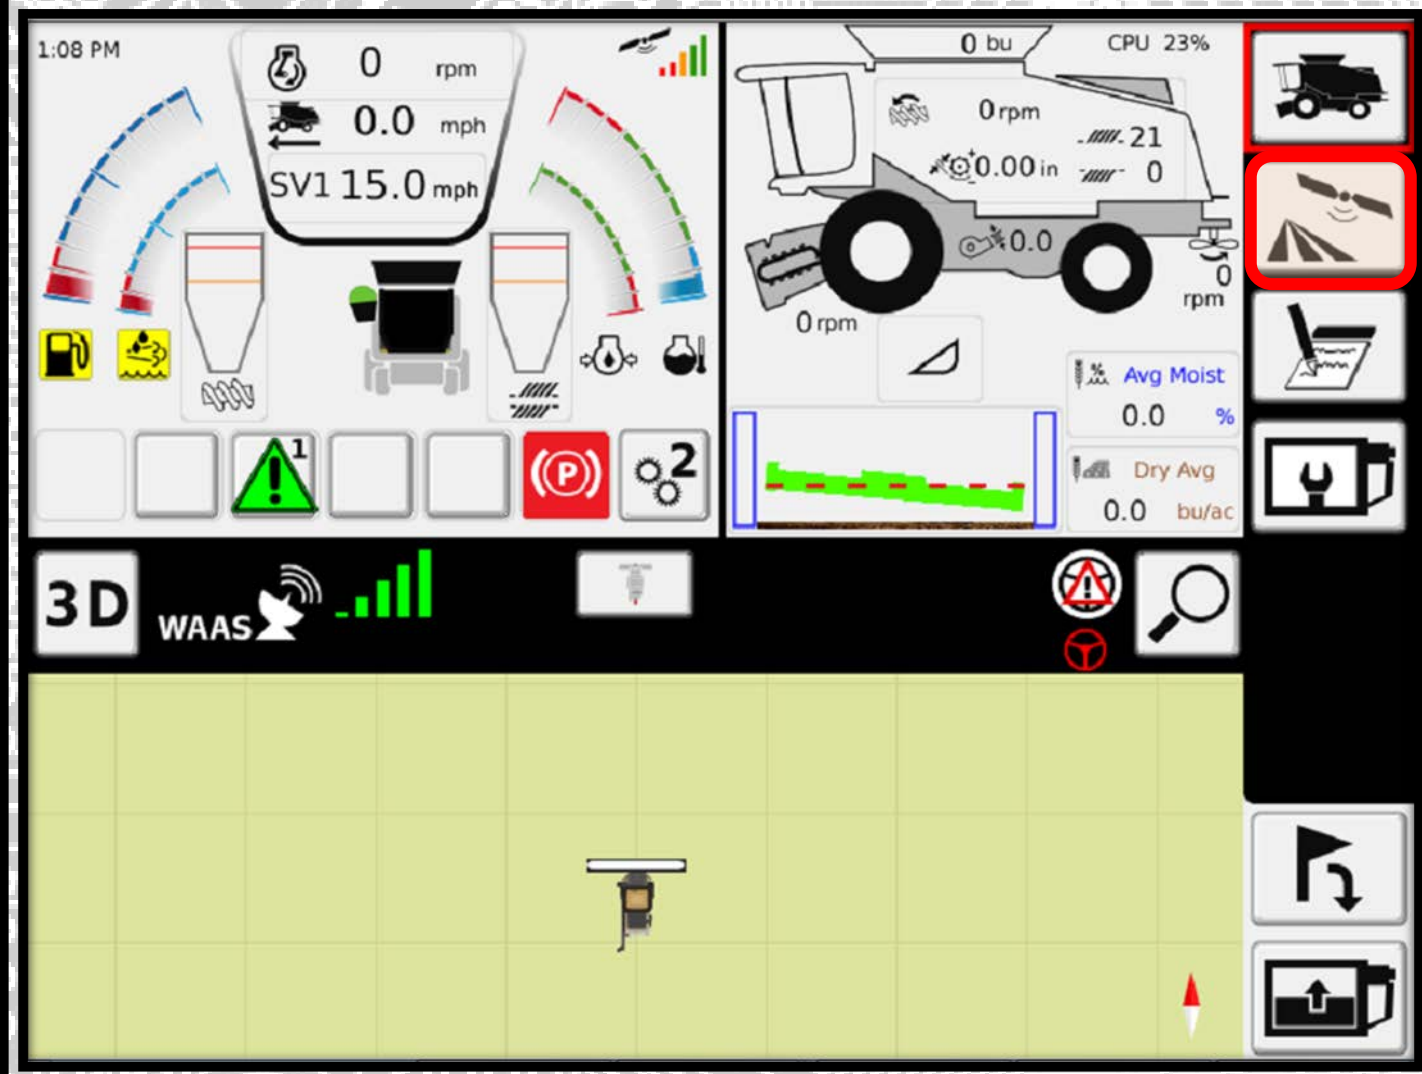


- Navigate to the guidance menu 

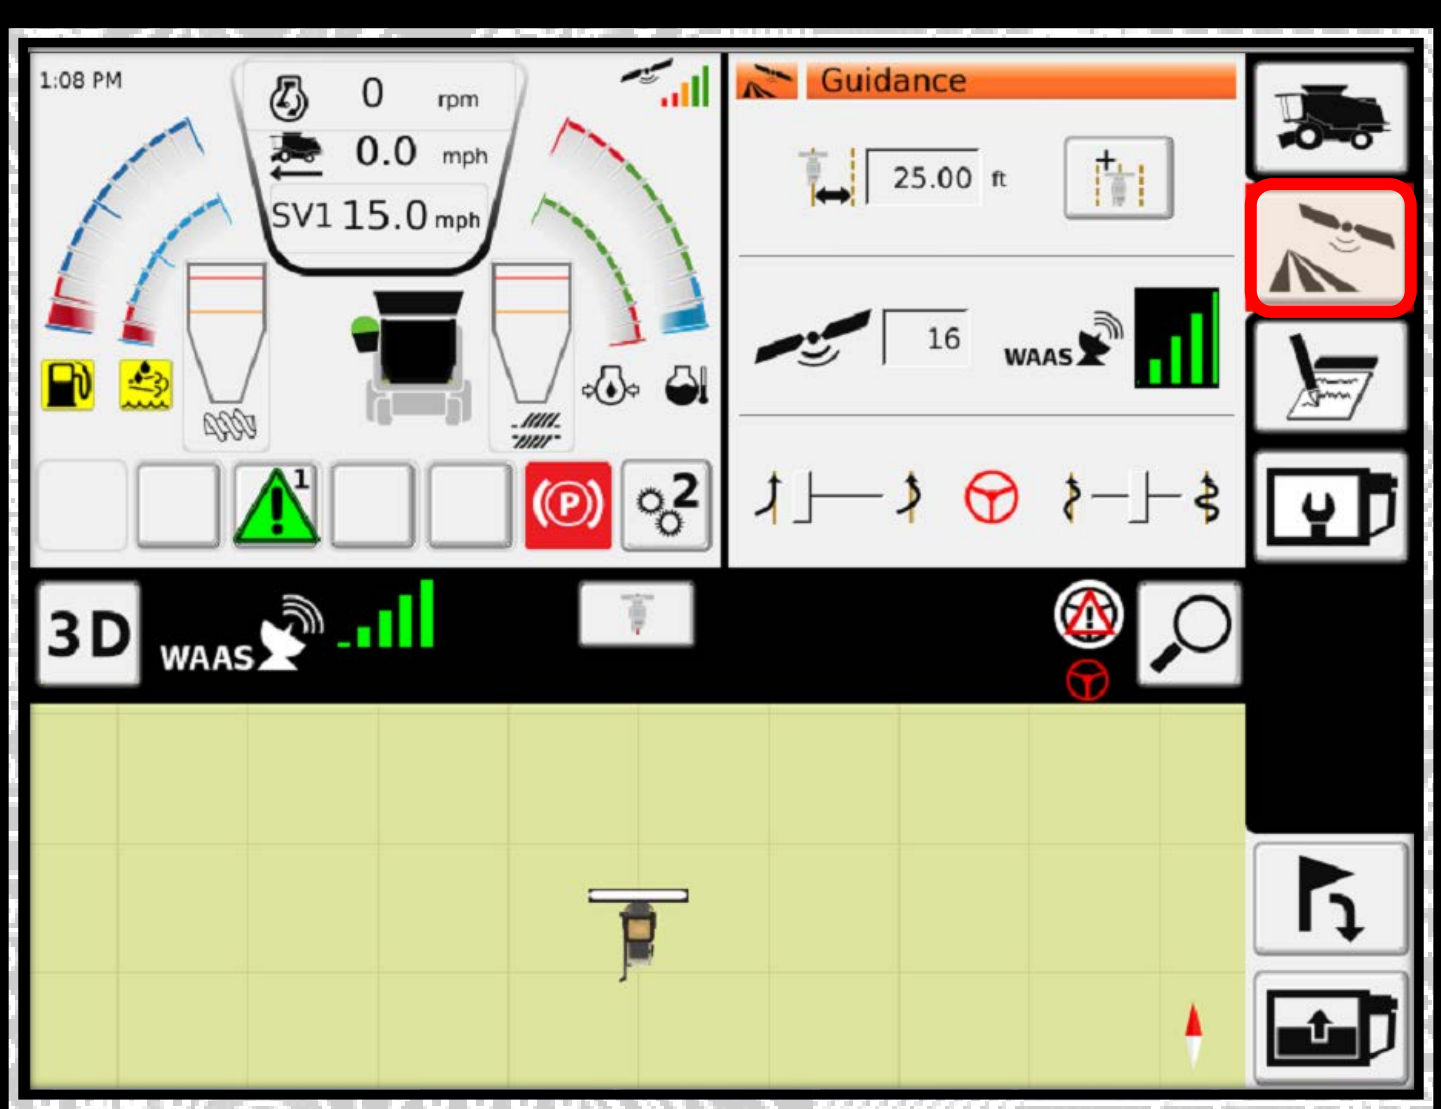


- Press the guidance icon again to access the guidance main menu



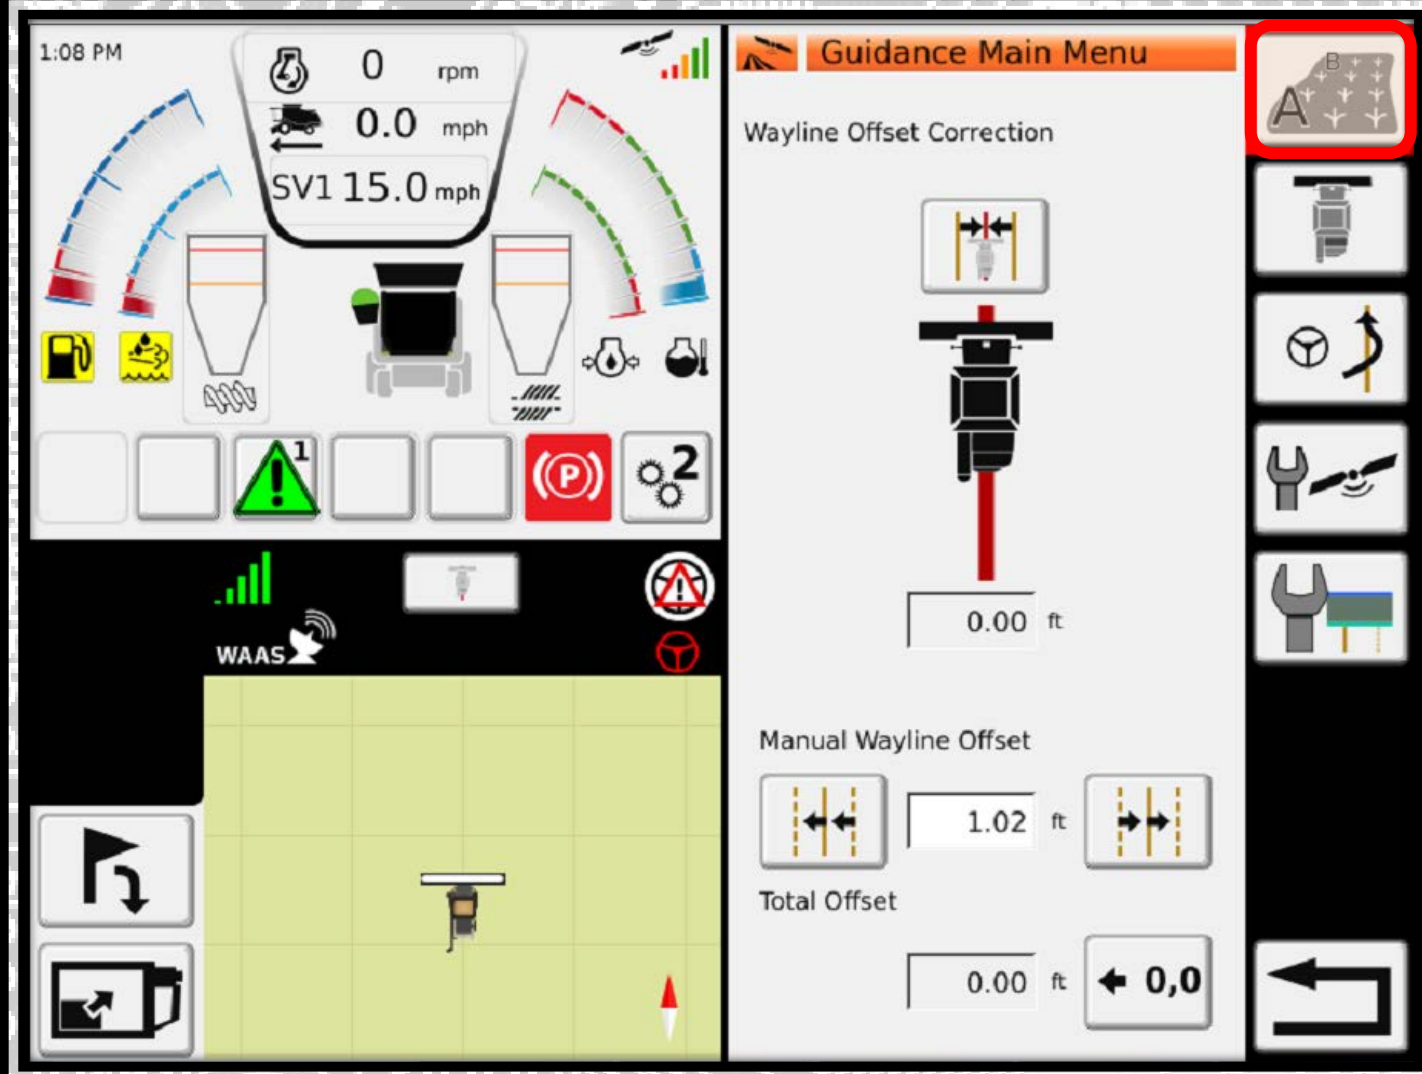


- Access the field settings page



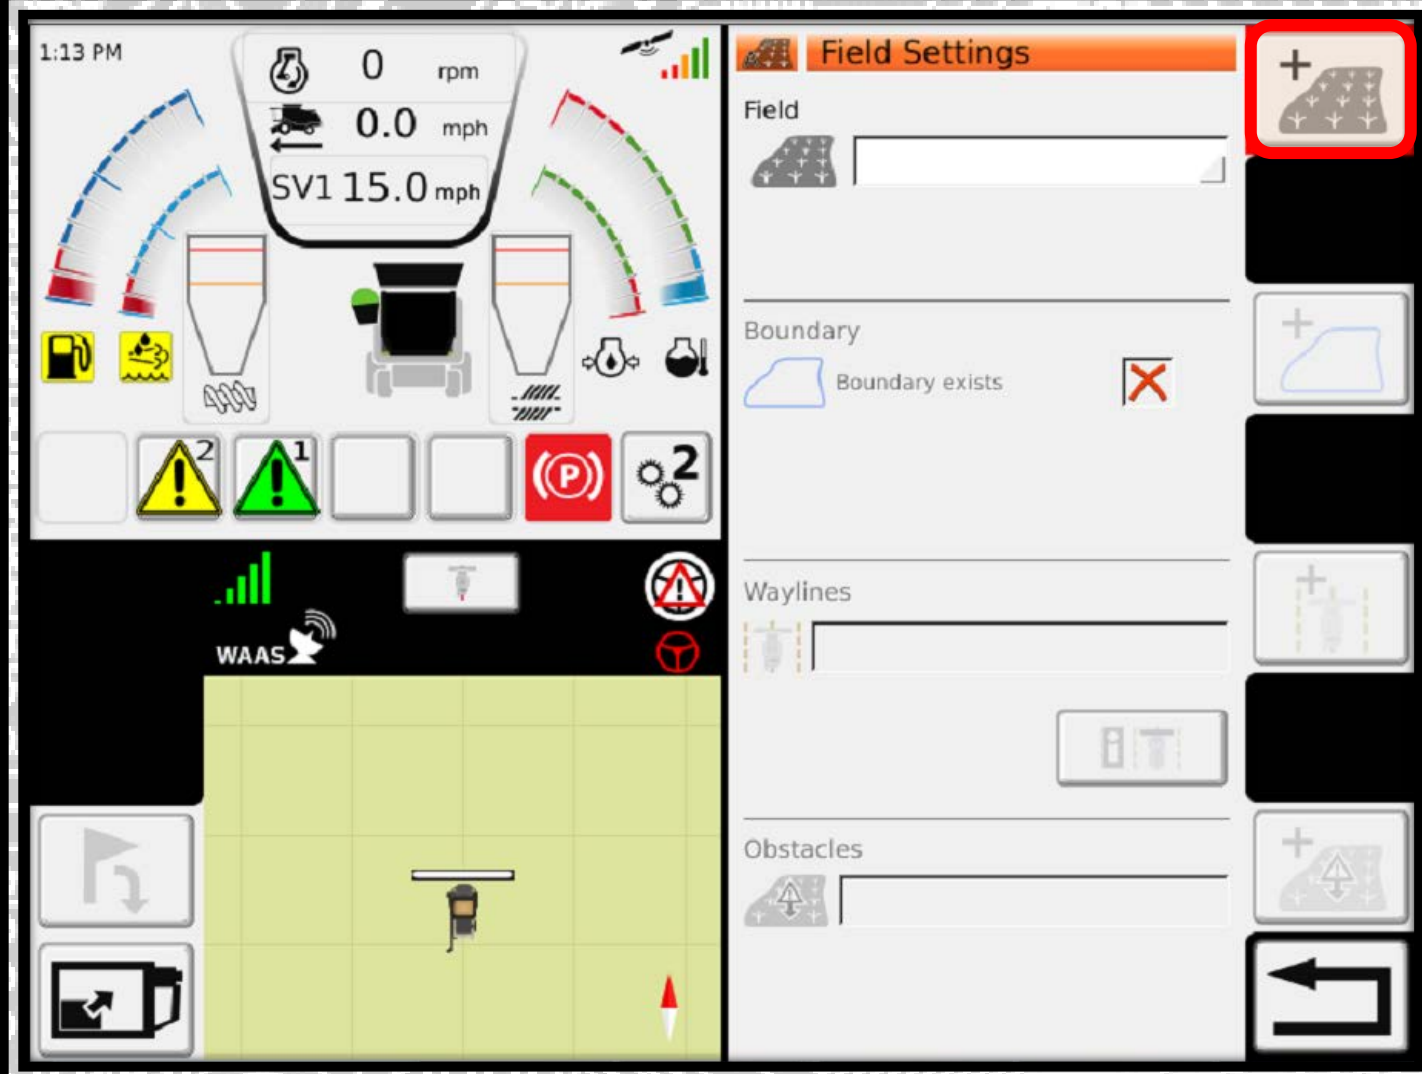


- Add a new field




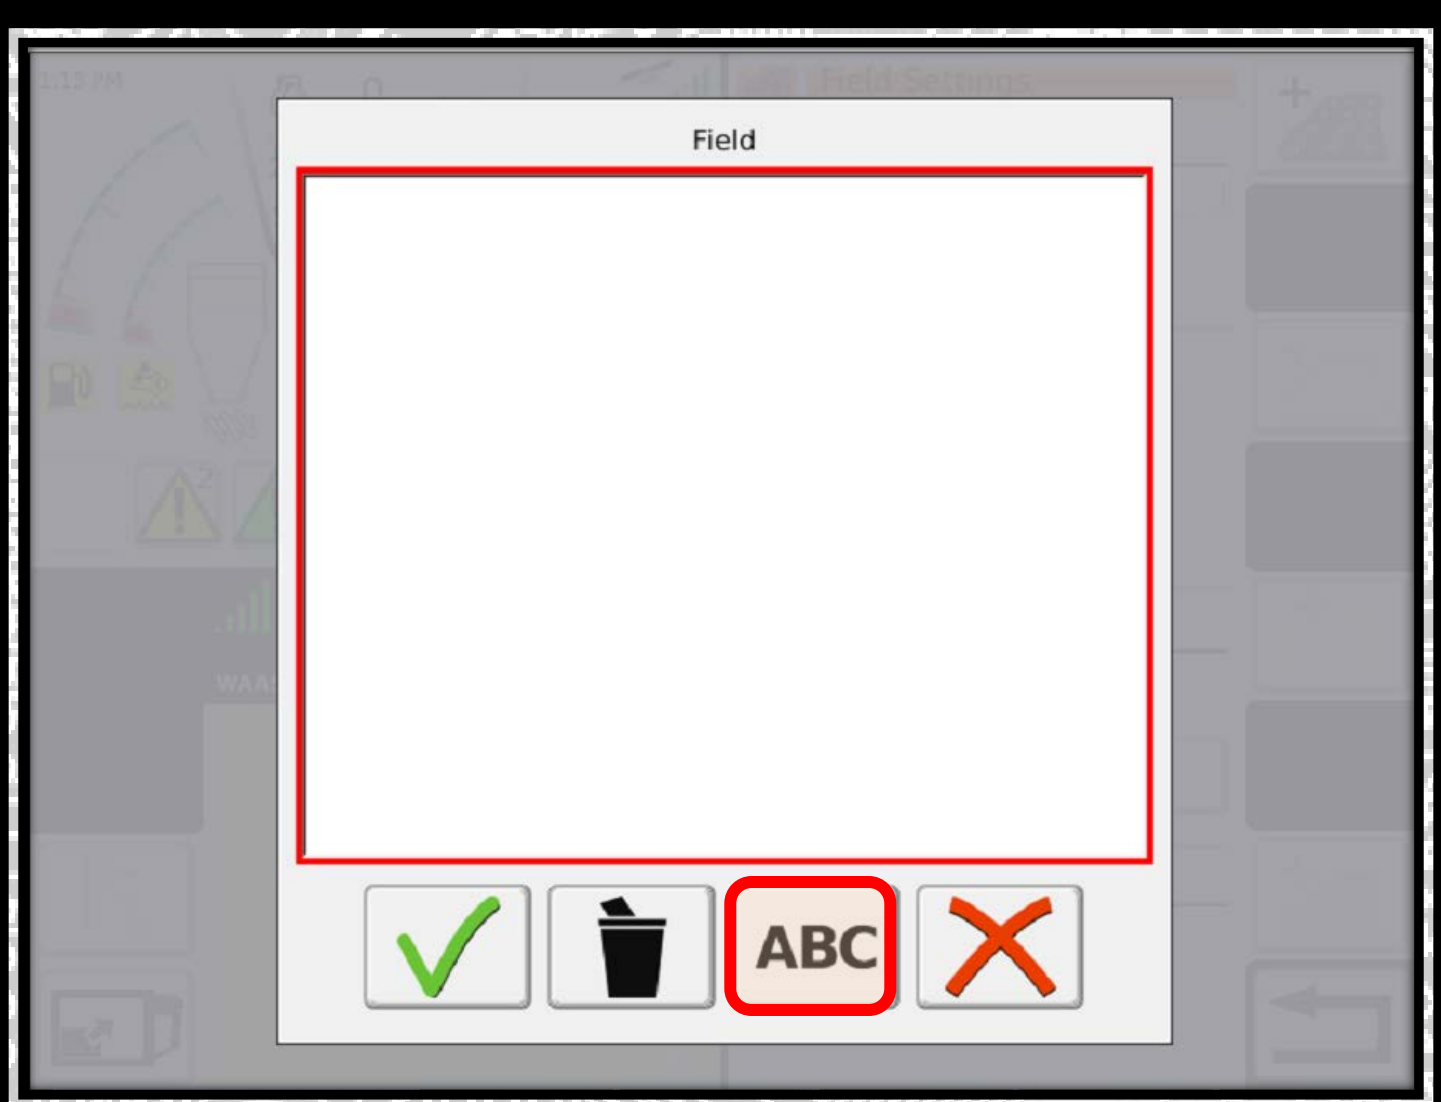

- Access the keyboard 




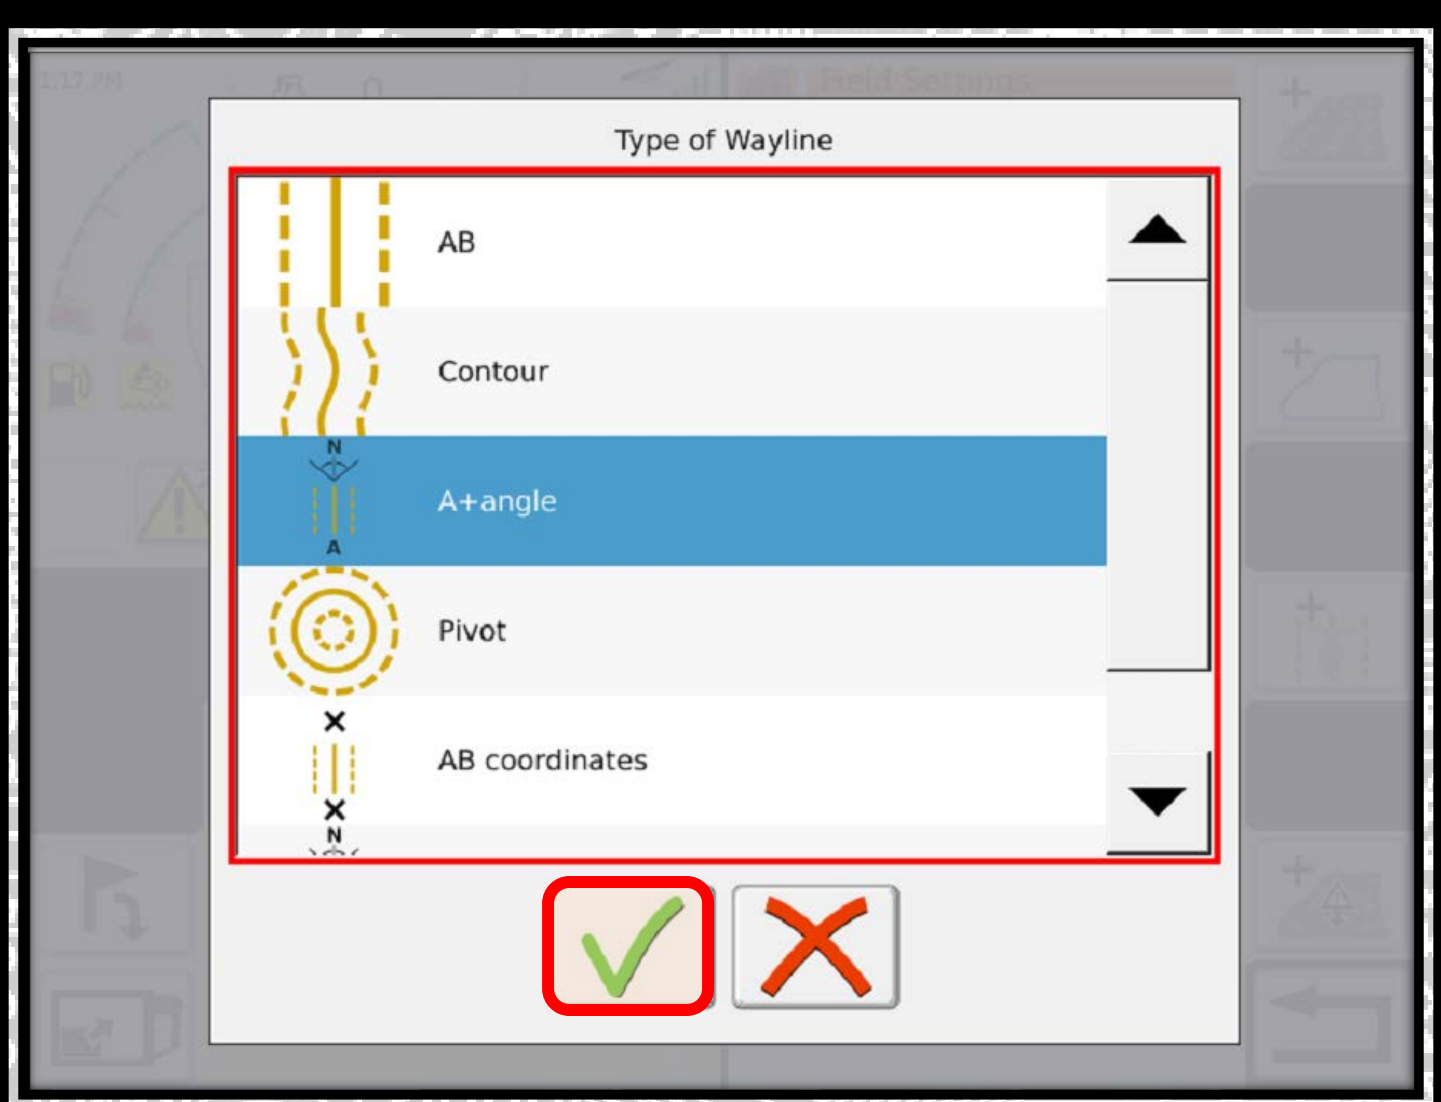
- Label the field 

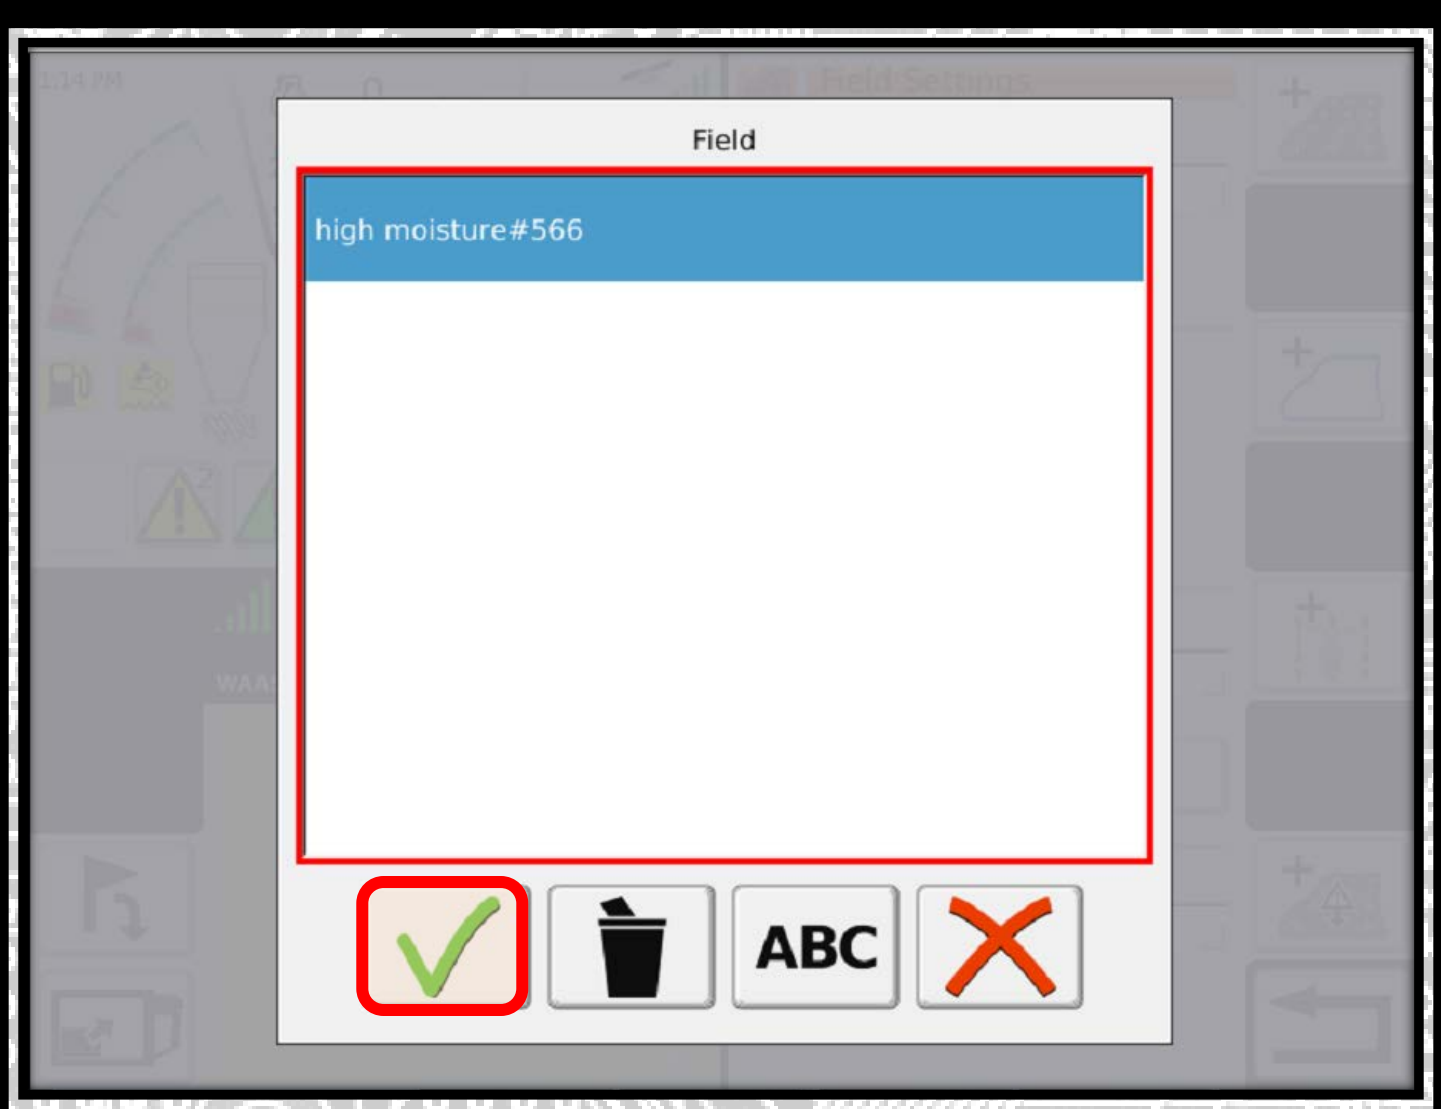

- Press the green check to continue




- Add a new wayline 




- Select your desired wayline and press the green check to continue

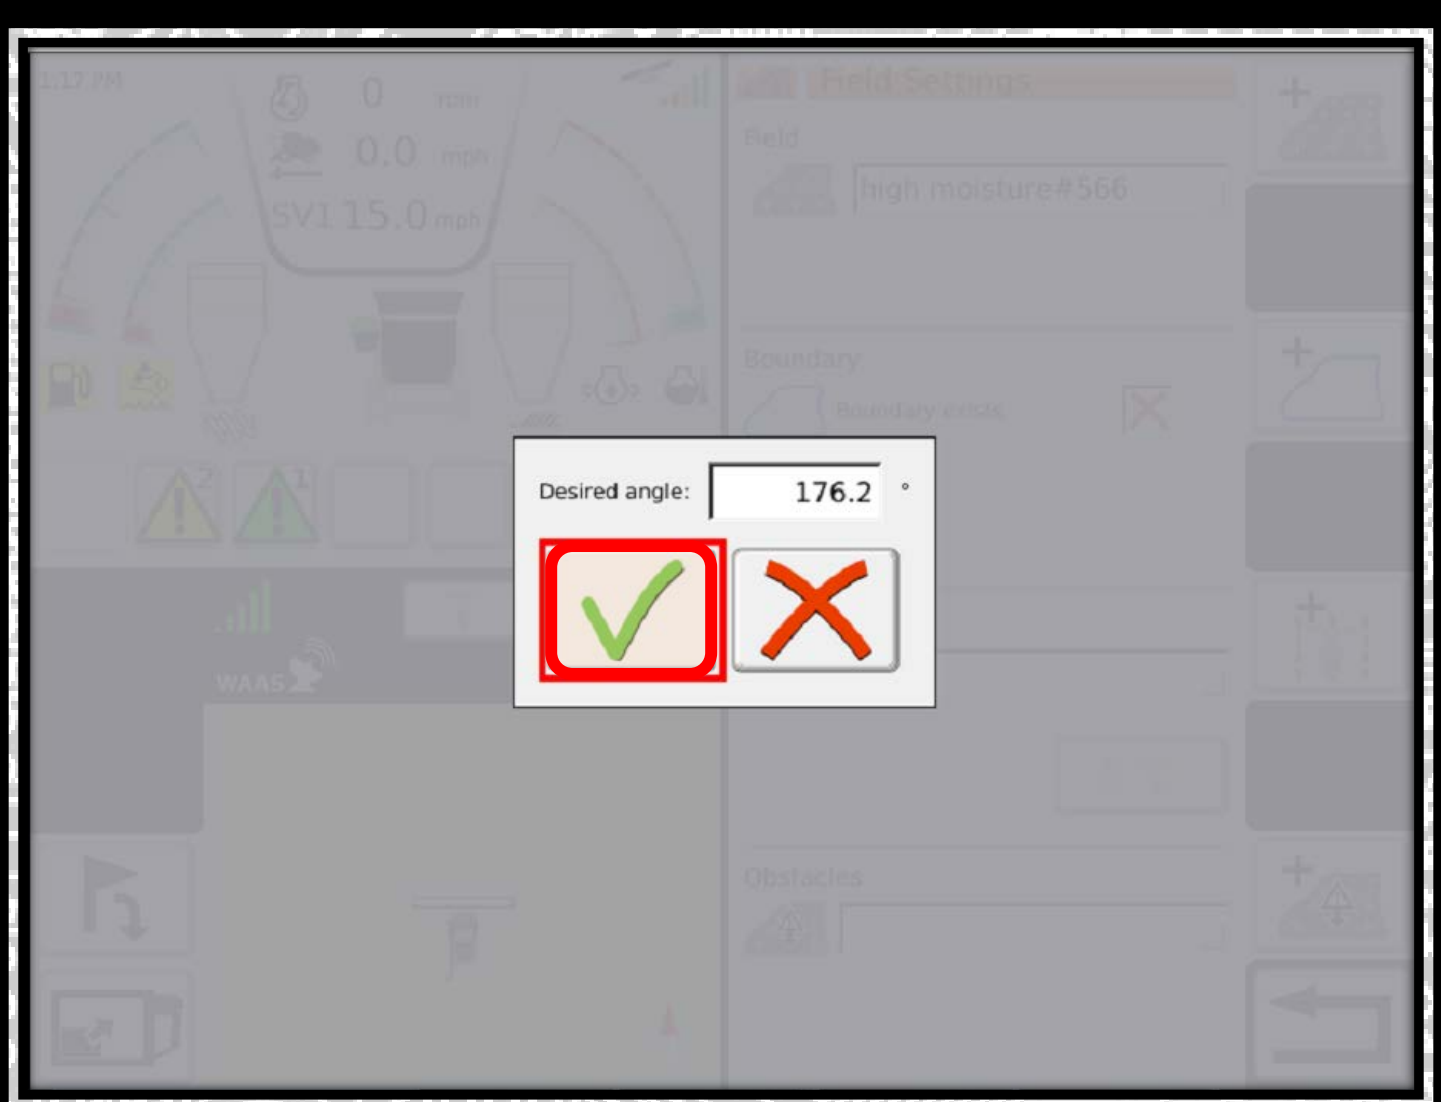


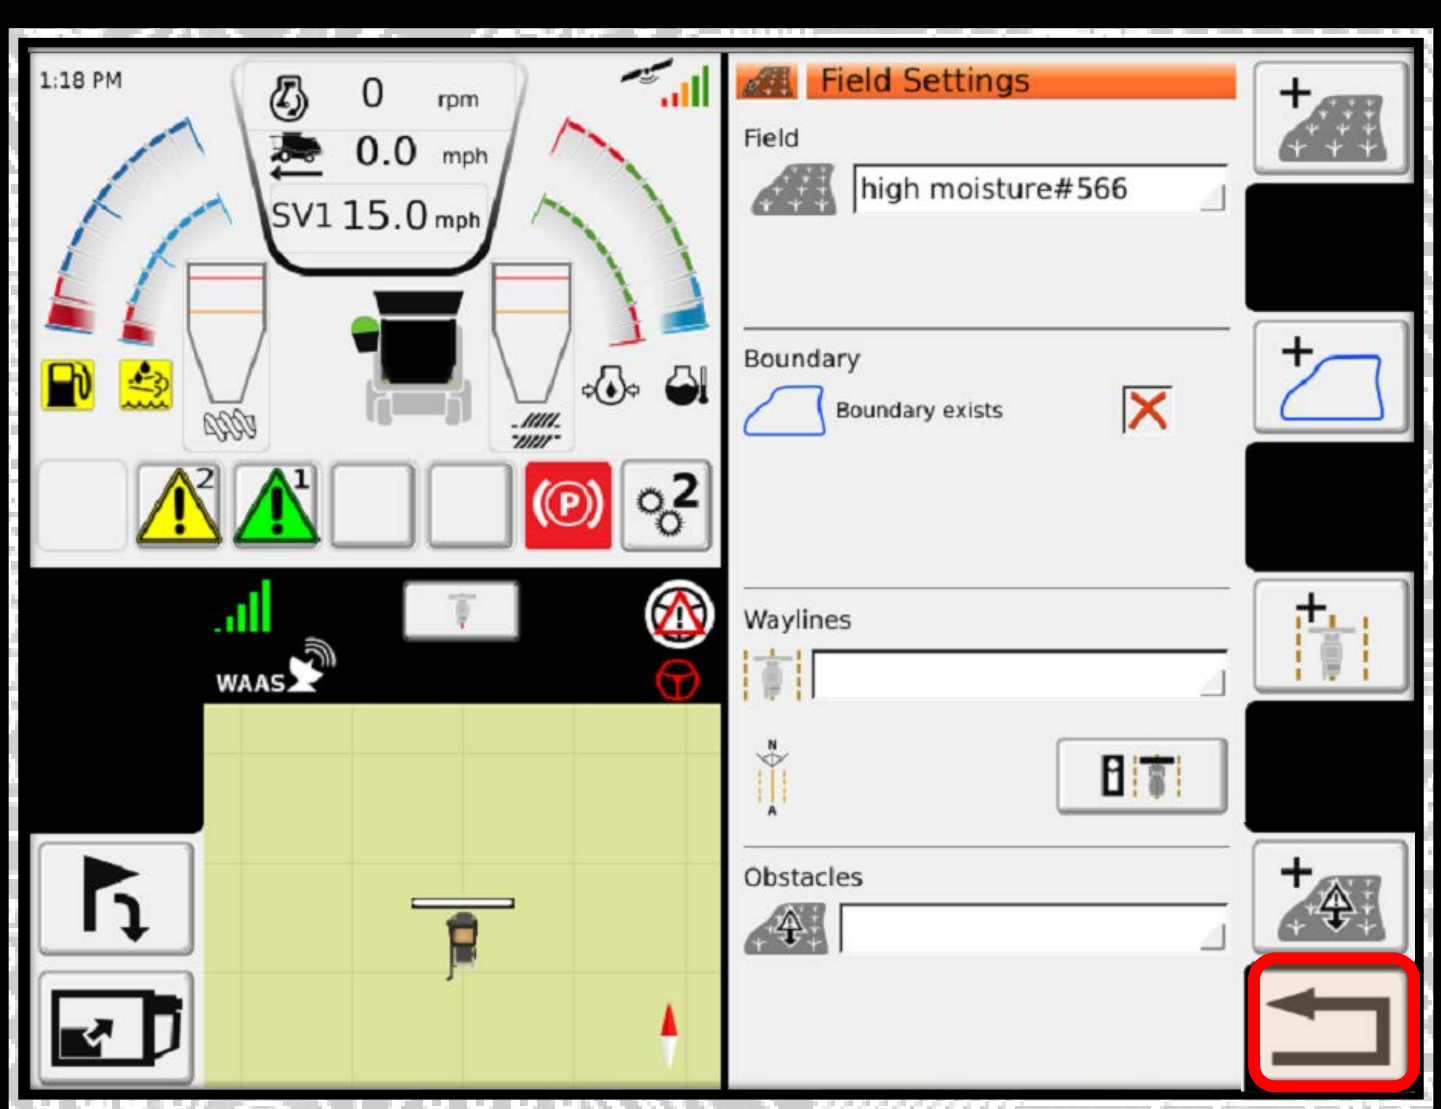


- Input your desired heading and press the green check to continue



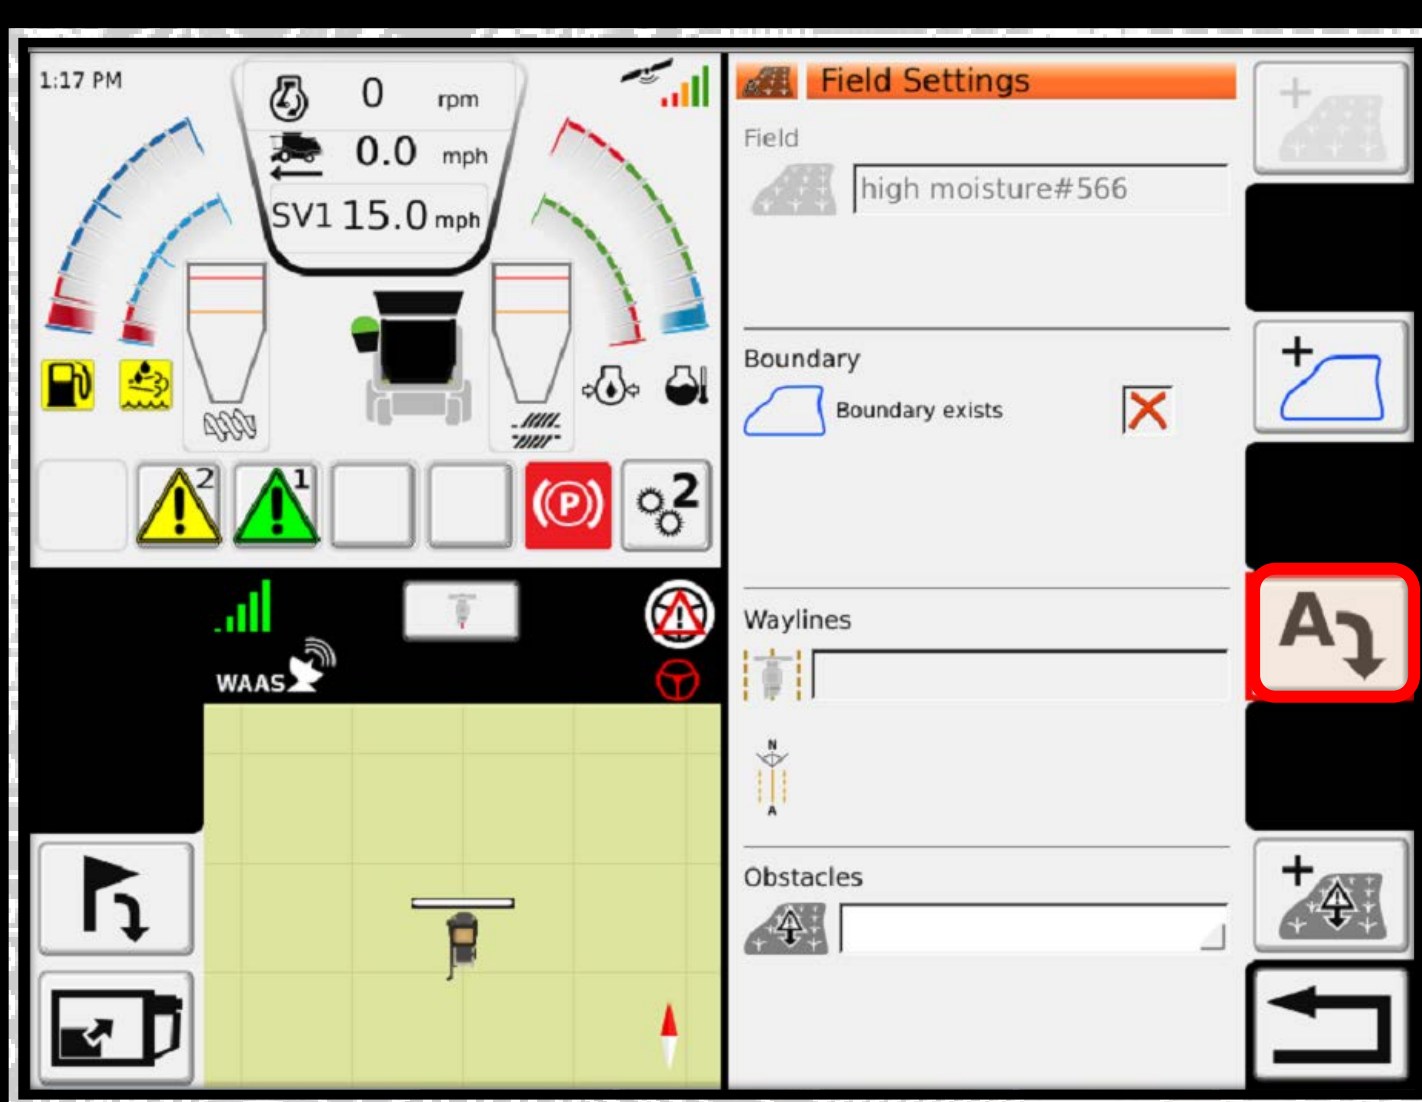


- Initiate the A+ Heading by pressing 



- Return to the previous screen



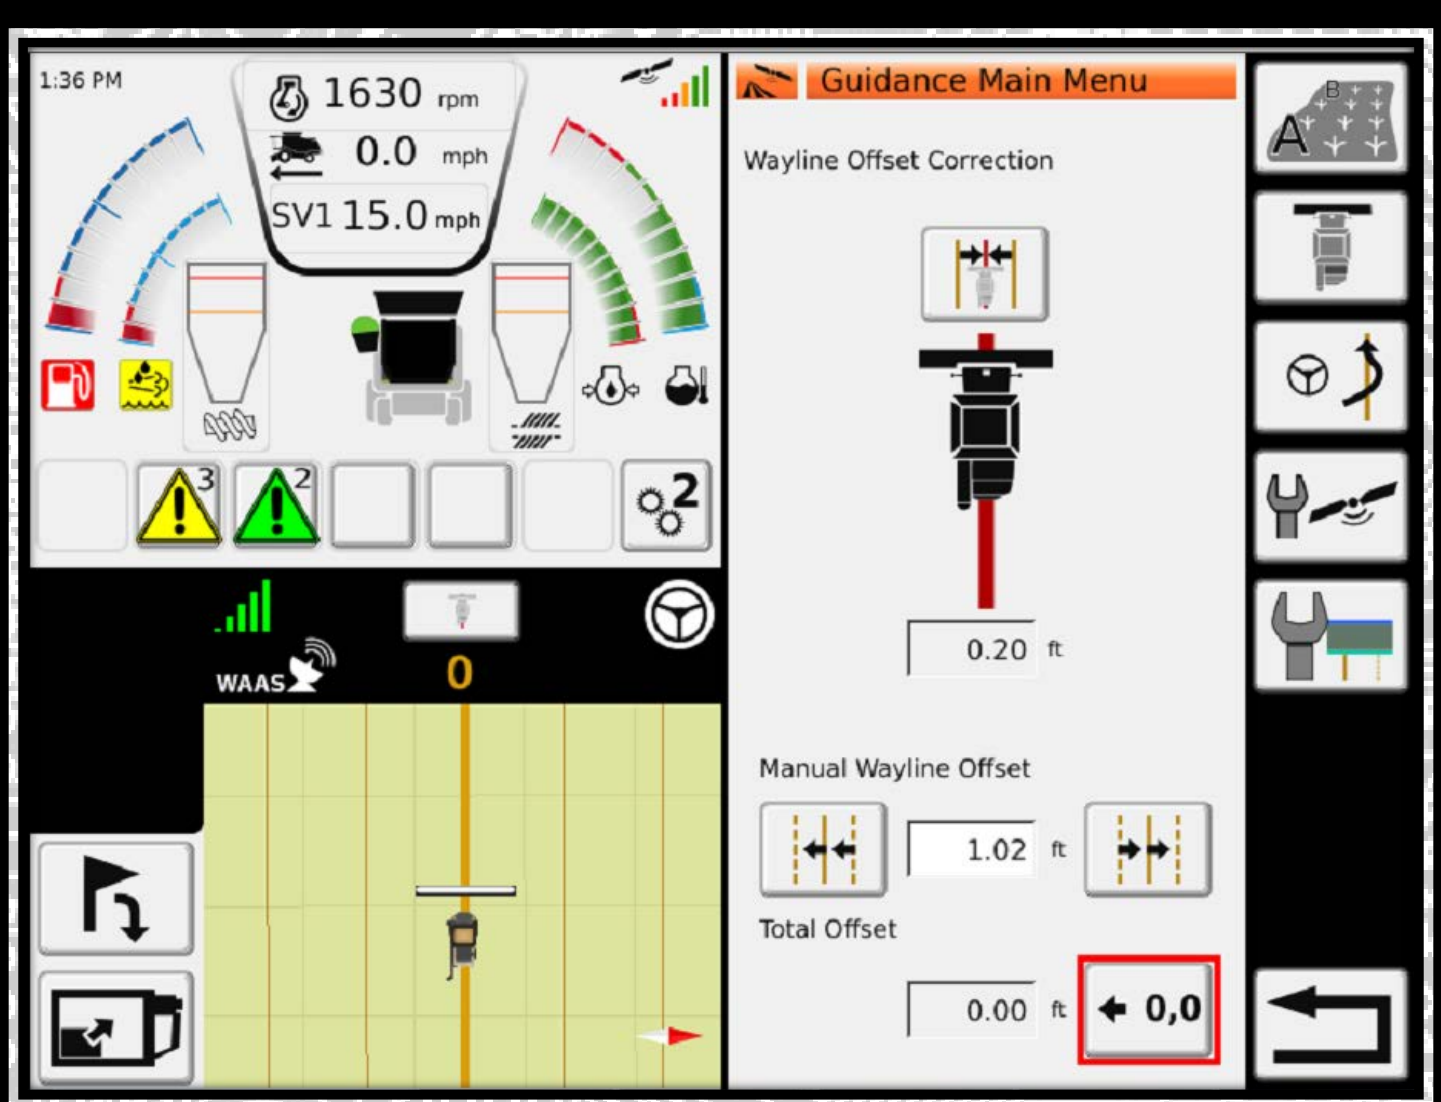


- The map in the bottom left quadrant is now visible with the A+ heading





- Engage the Auto Guide system by selecting the “remote engage” button on the hydro handle



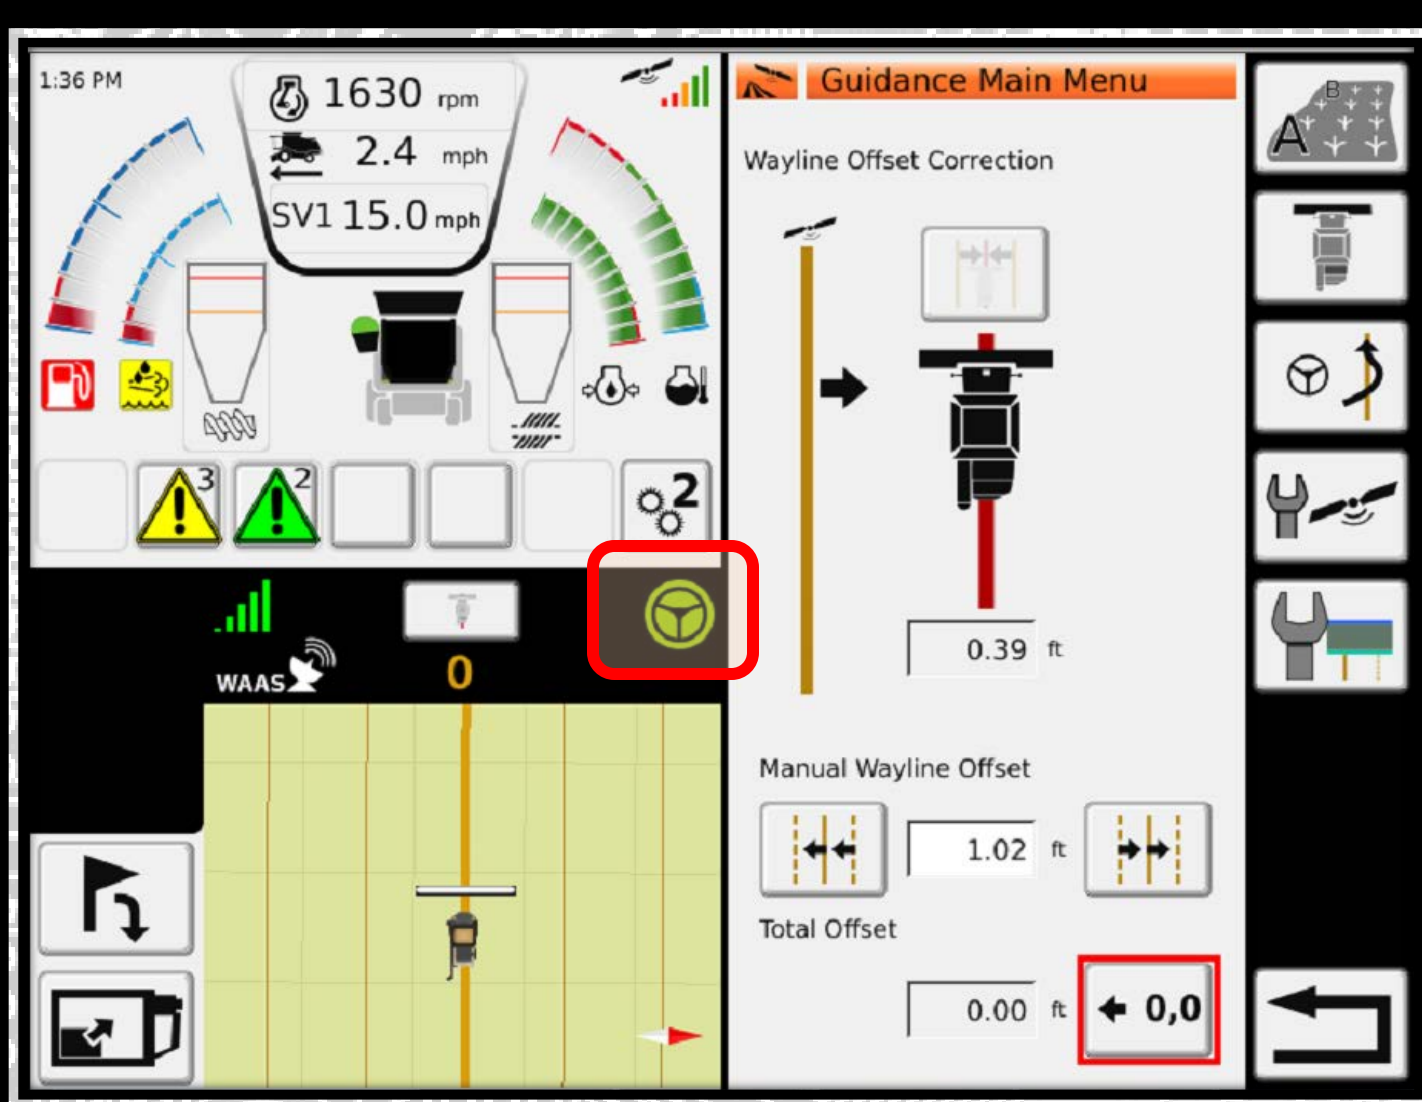


- The Auto Guide system is now engaged following the established A+ heading. The auto guide symbol is now green to visually indicate the system is engaged




- To nudge right, use the switch on the back of the hydro handle or press the nudge right icon on the Tyton Terminal



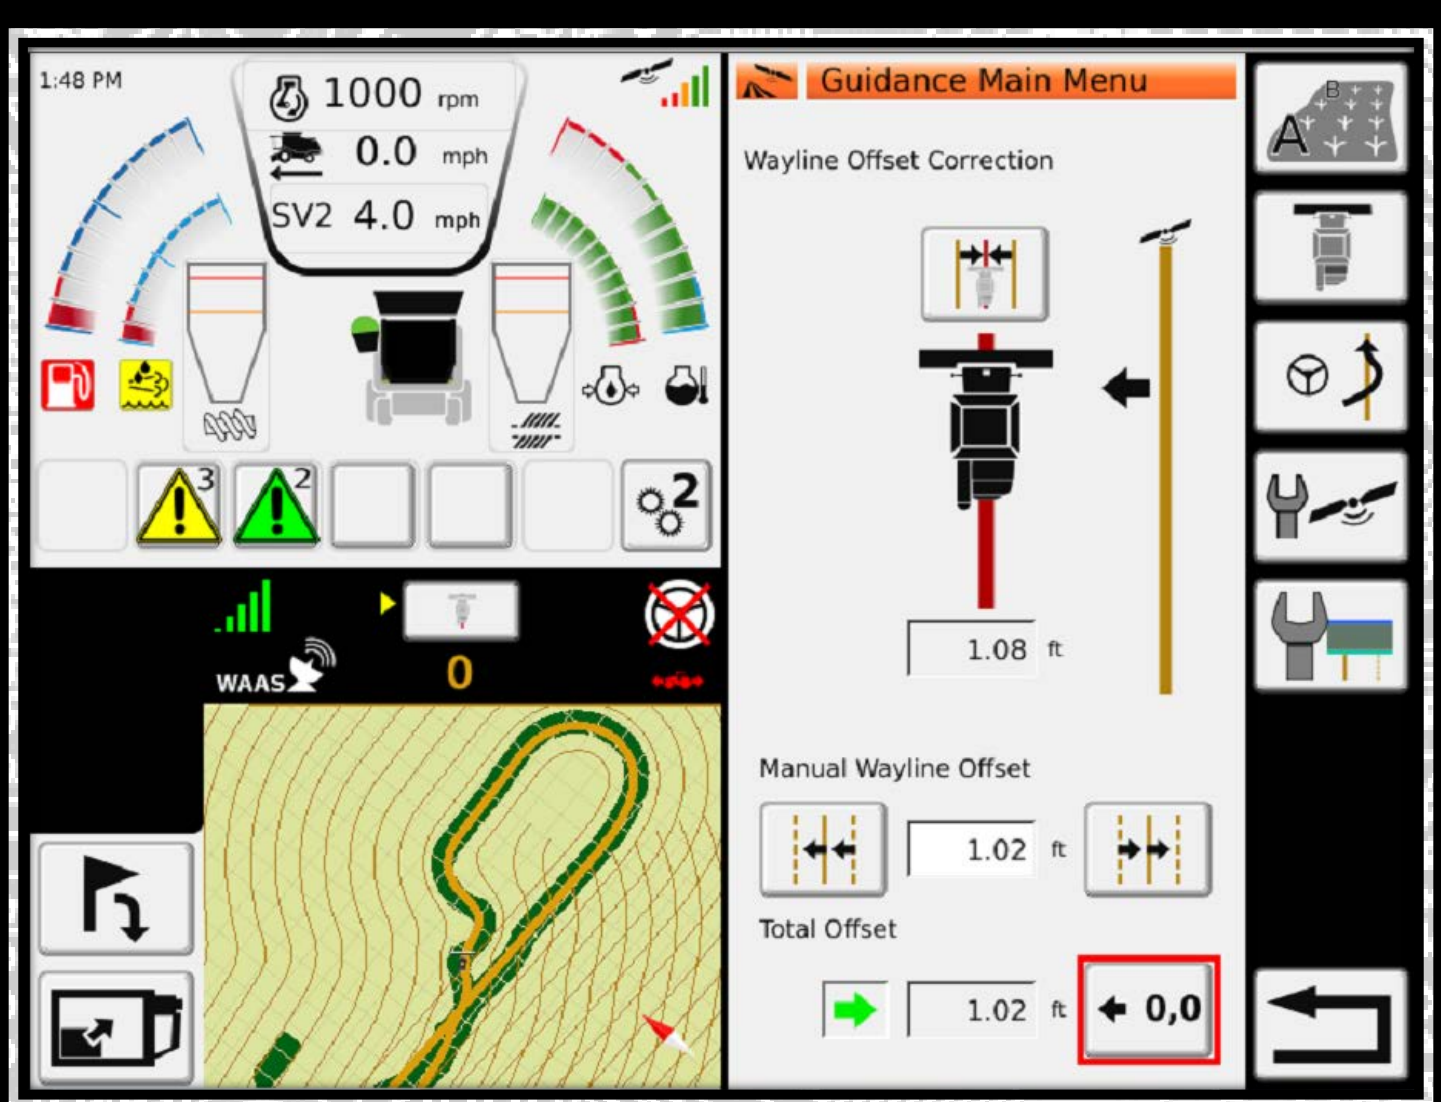


- The wayline is now offset 1 foot to the right



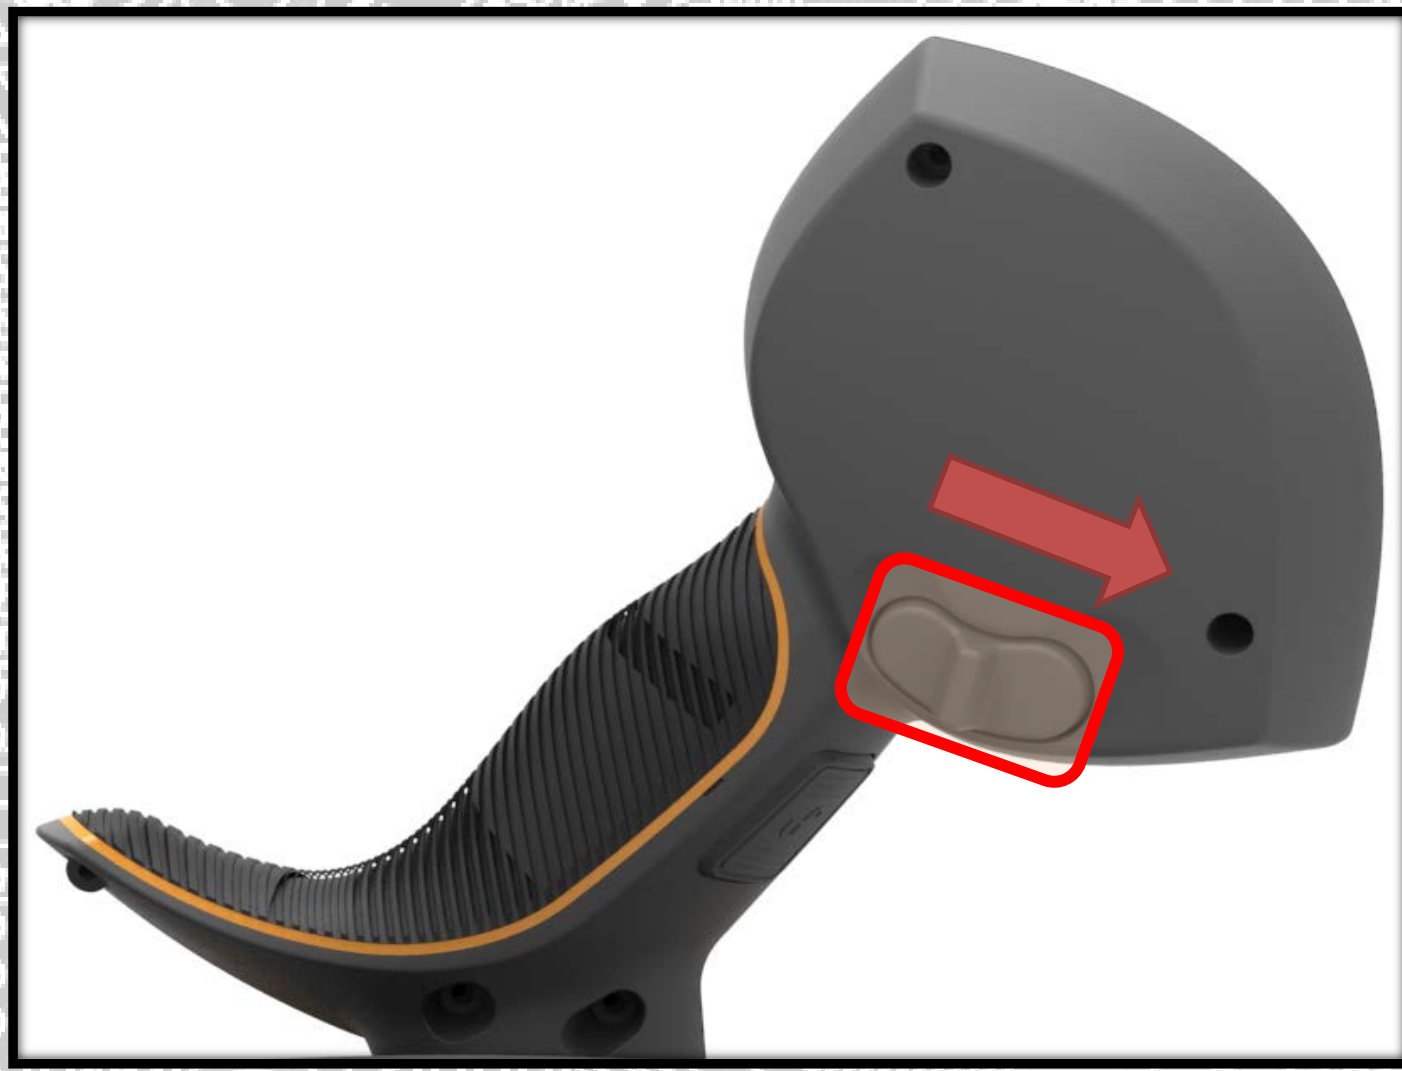



- To nudge left, use the switch on the back of the hydro handle or press the nudge left icon



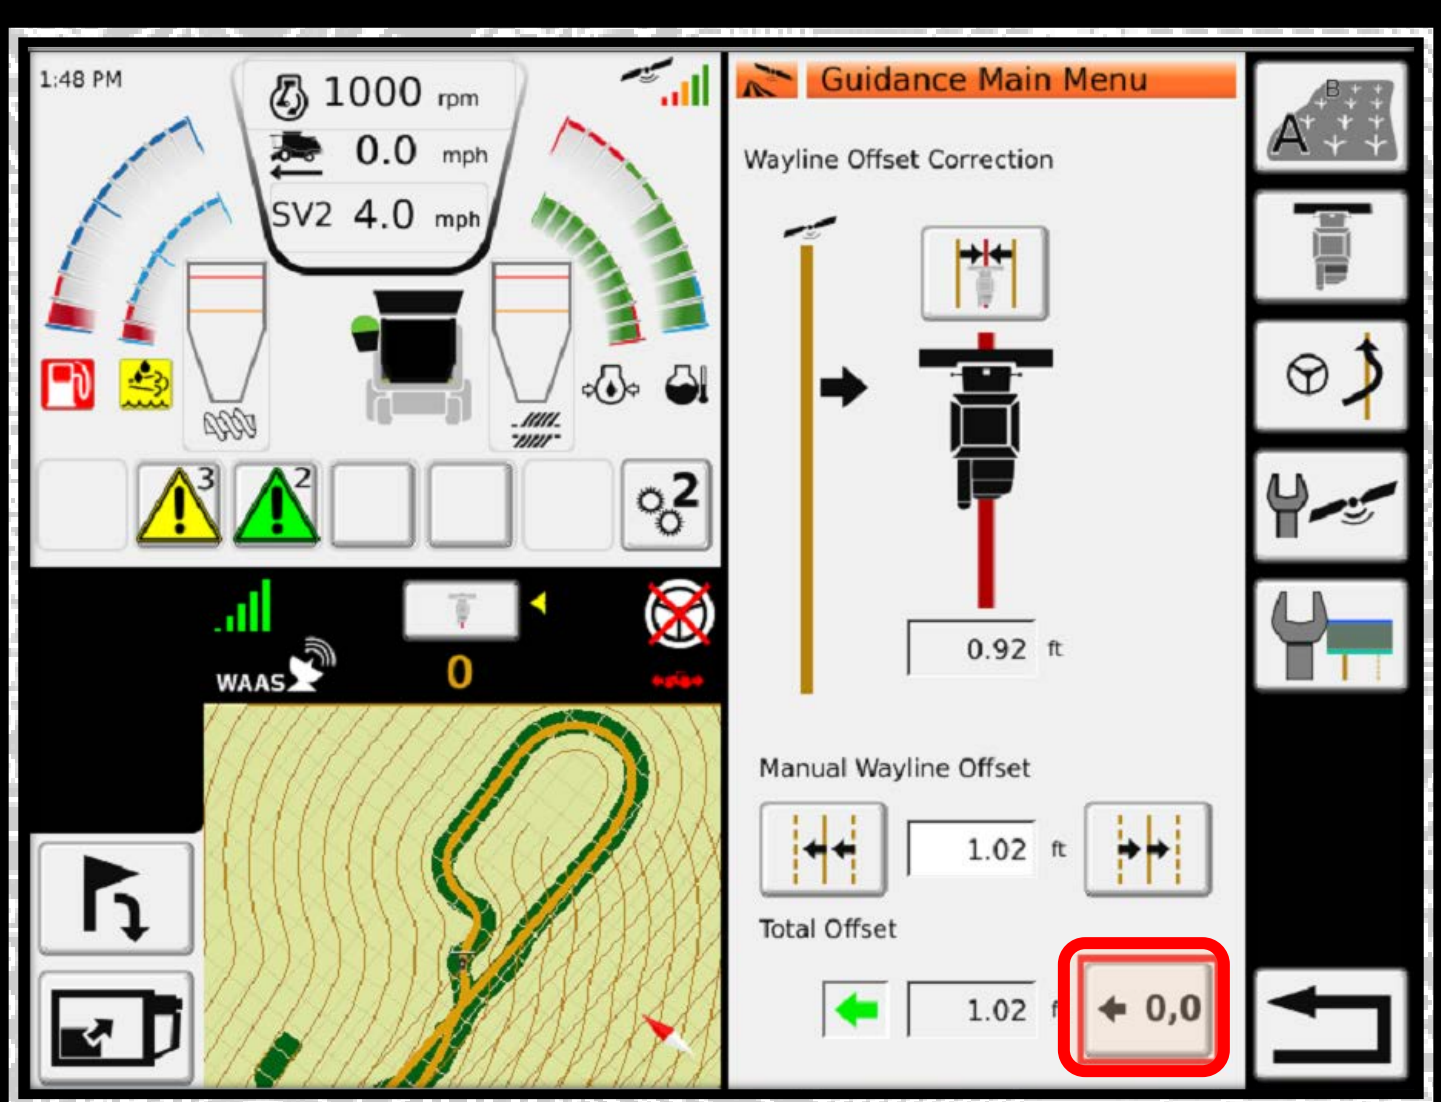

- The wayline is now offset 1 foot to the left.

- To reset your wayline offset to zero, press 

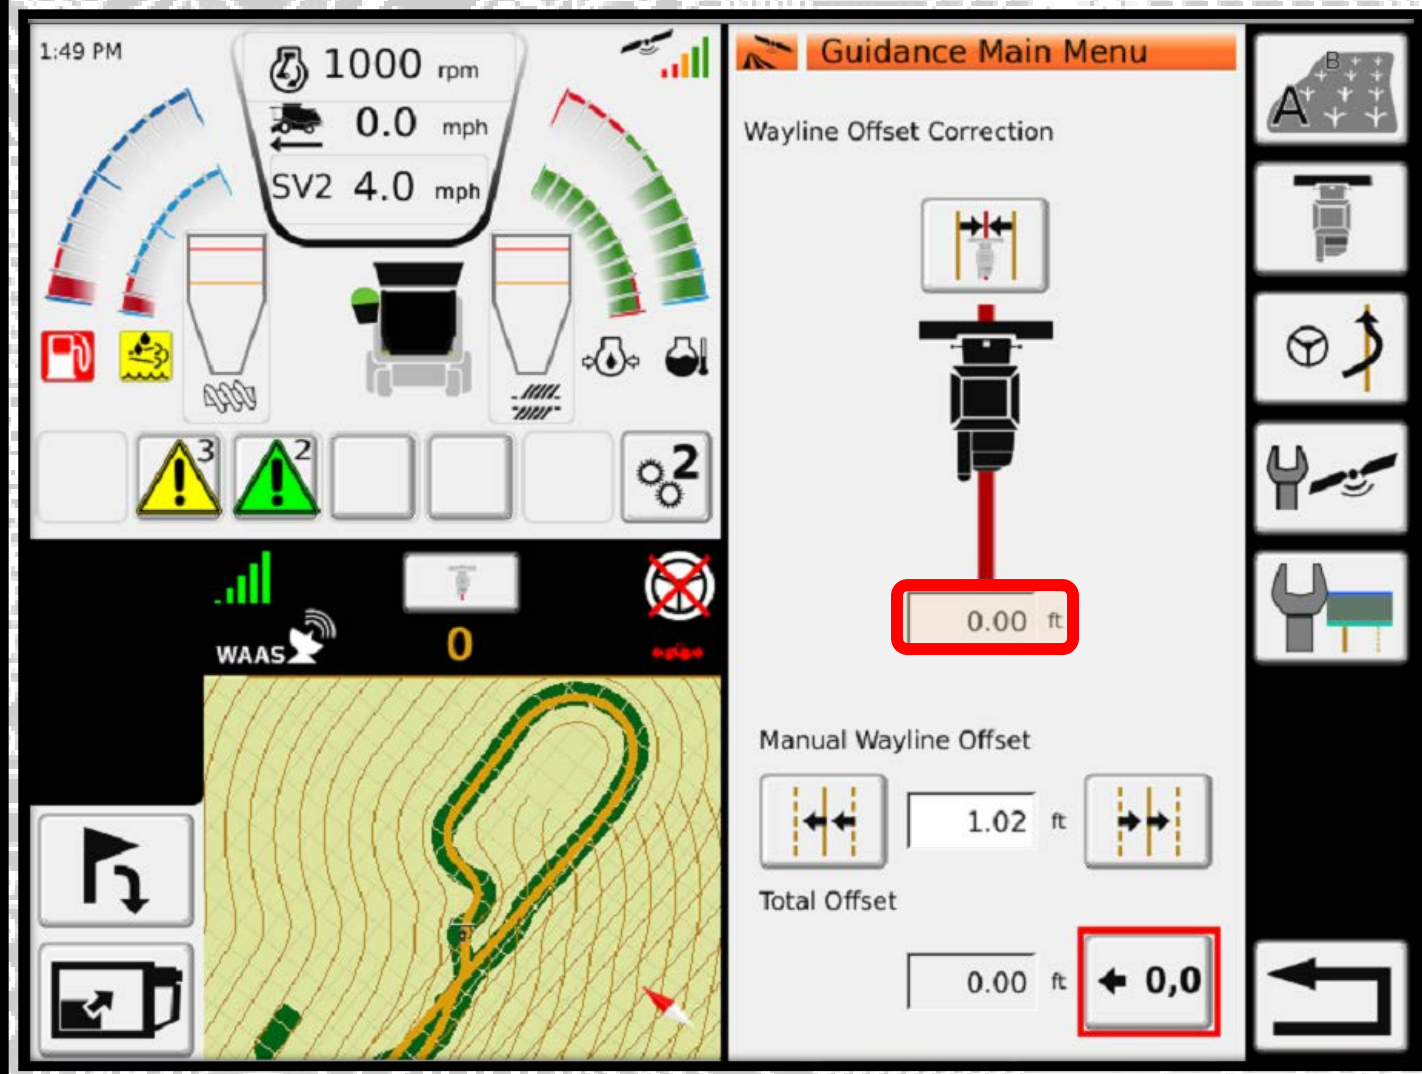

- The offset is now set to zero